



MECABLITZ 58 AF-2 digital
für/for Nikon-Digitalkameras,
incl. CLS-System

Bedienungsanleitung
Gebruiksaanwijzing
Manuale istruzioni

Mode d'emploi
Operating instruction
Manual de instrucciones

1 Safety instructions	115
2 Dedicated flash functions	116
2.1 Division into camera groups	116
3 Preparing the flash unit for use	117
3.1 Mounting the flash unit	117
3.2 Power supply	117
3.3 Switching the flash unit on and off	117
3.4 Power Pack P76 (optional accessory)	118
3.5 Auto OFF for the flash unit	118
4 Display illumination	118
5 Operating modes (mode menu)	118
5.1 Adjusting procedure for flash operating modes	118
5.2 TTL flash mode	119
5.3 TTL fill-in flash mode	120
5.4 Automatic flash mode	121
5.5 Automatic fill-in flash mode	122
5.6 Manual flash mode	122
5.7 Strobe flash mode	122
6 Flash parameters (Parameter menu)	124
6.1 Setting procedure for the flash parameters	124
6.2 Aperture (F)	125
6.3 Main reflector position (Zoom)	125
6.4 Flash exposure correction (EV)	126
6.5 Light sensitivity (ISO)	126
6.6 Manual partial light output (P)	127
7 Special functions (Select menu)	127
7.1 Setting procedure for the special functions	127
7.2 Beep function (Beep)	128
7.3 Flash Bracketing Series (FB)	129
7.4 Extended Zoom Mode (Zoom Ext)	129
7.5 Adjusting exposure format (Zoom Size)	130
7.6 Cordless remote mode (Remote)	131
7.7 Meter-Feet changeover (m/ft)	131
7.8 Secondary reflector	132
7.9 Modelling Light (ML)	132
7.10 Auto OFF Function (Standby)	133
7.11 Key-Lock	134
7.12 AF-BEAM (AF auxiliary light)	134
8 Motor Zoom Reflector	135
9 Wide-angle diffuser	135

10 Flash techniques	136
10.1 Bounce flash	136
10.2 Bounce flash with a reflector card	136
10.3 Bounce flash with secondary reflector	136
10.4 Close-ups / macro shots	136
10.5 Manual flash exposure corrections	137
11 Flash readiness indication	137
12 Automatic flash sync speed control	137
13 Correct exposure indication	138
14 Underexposure warning in TTL flash mode	138
15 Displays in the camera viewfinder	138
16 Flash range indication	139
16.1 Automatic adjustment of the flash range indication	139
16.2 Manual adjustment of the flash range indication	139
16.3 „FEE“ error indication on the flash unit's LC display	139
16.4 Guide number indication when using lenses without CPU	139
17 Flash exposure memory	140
18 Flash synchronisation	140
18.1 Normal synchronisation	140
18.2 Second curtain synchronisation (rear mode)	104
18.3 Slow synchronisation (SLOW)	104
18.4 Automatic FP high-speed synchronisation	141
19 Preflash function for red-eye reduction	141
20 Multi-zone AF measuring beam	141
21 Wireless remote operation	142
21.1 Switching remote operation on and off	142
21.2 Settings on the master flash unit	143
21.3 Settings on the slave flash unit	143
21.4 Testing remote operation	143
21.5 SERVO mode	144
22 Care and maintenance	145
22.1 Firmware updates	145
22.2 Reset	145
22.3 Flash capacitor forming	145
23 Troubleshooting	145
24 Technical data	148
25 Optional accessories	149
Table 3: Guide numbers at maximum light output (P 1)	222
Table 4: Flash durations at the individual partial light output levels	223
Table 5: Camera shutter speeds in stroboscopic mode	224
Table 6: Recycling times and number of flashes with different battery types	225
Table 7: Maximum guide numbers at HSS-Mode	225

Introduction

Thank you for purchasing a Metz product. We are happy to welcome you as a customer.

Of course, you are excited to start using the flash unit right away. However, it is worthwhile reading the operating instructions first to learn how to use the flash correctly.

This flash unit is suited for:

- Analog and digital Nikon cameras with TTL, D-TTL, and i-TTL flash control.
- Digital Fuji SLR cameras „Fuji FinePix S2Pro“, „Fuji FinePix S3Pro“.

 ***This flash unit is not suited for other brands of cameras.***

Also take a look at the image page at the end of the manual.

1 Safety instructions

- The flash unit is intended and approved exclusively for photographic use!
- Never fire a flash in the vicinity of flammable gases or liquids (petrol, solvents, etc.)! **DANGER OF EXPLOSION!**
- Never take flash shots of car, bus or train drivers, or of motorcycle and bicycle riders while they are in motion. They could be blinded by the flash and cause an accident!
- Never fire a flash in the immediate vicinity of the eyes! A flash fired into the eyes of a person or animal at close range may damage the retina and lead to severe visual disorders, including blindness!
- Only use the approved power sources listed in the Operating Instructions!
- Do not expose batteries to excessive heat sources such as sunshine or fire!
- Never throw flat/dead batteries onto a fire!
- Dead batteries should be removed from the flash unit immediately, as lye leaking from dead batteries can damage the flash unit.
- Never recharge dry cell batteries!

- Do not expose the flash unit or battery charger to dripping or splashing water such as rain!
- Protect the flash unit from excessive heat and humidity! Do not store the flash unit in the glove compartment of a car.
- When a flash is fired, no opaque material may be in front of or directly on the reflector screen of the flash unit, nor may there be dirt on the reflector screen. The high heat generated by the flash can cause such material to burn or cause damage to the reflector screen.
- Do not touch the reflector screen after a series of flash shots, as you may burn yourself.
- Never disassemble the flash unit! **DANGER: HIGH VOLTAGE!** There are no components inside the flashgun that can be repaired by a layman.
- When taking a series of flash shots at full light output and with the rapid recycling times possible with NiMH battery operation, make sure to wait for at least 10 minutes after 15 flashes. Otherwise, the flash unit will be overloaded.
- This flash unit may be used in combination with a camera-integrated flash only if the flash can be folded out completely.
- Rapid changes in temperature may lead to condensation. If this occurs, allow time for the unit to become acclimatized.
- Never use defective batteries of any type with this flash unit.

2 Dedicated flash functions

Dedicated flash functions are flash functions that have been specially adapted to a given camera system. Depending on the type of camera, different flash functions are supported.


2.1 Division into camera groups

Nikon cameras can be subdivided into the following groups with regard to their dedicated flash functions:

Cameras from Group A	Cameras without digital data transfer to the flash unit e.g. Nikon F601, F601M, F60, F50, FM-3A Digitale Kompaktkameras "Nikon - Coolpix"
Cameras from Group B	Cameras with digital data transfer to the flash unit e.g. Nikon F4, F4s, F801, F801s
Cameras from Group C	Cameras with digital data transfer to the flash unit and 3D multi-sensor fill-in flash mode e.g. Nikon F5, F100, F90X, F90, F80, F 75, F70, Fuji FinePix S2Pro
Cameras from Group D	Digital Nikon single-lens reflex cameras with D-TTL flash mode (without CLS) e.g. D1, D1x, D1H, D100, Fuji FinePix S3Pro
Cameras from Group E	Digital Nikon SLR cameras with i-TTL flash mode (CLS compatible Cameras) e.g. D2Hs, D2x, D2xs, D3, D3x, D40, D40x, D50, D60, D70, D70S, D80, D90, D200, D300, D700, D3000, D5000, F6, Fuji FinePix S5Pro, Coolpix 8400, 8800, P5000, P5100

Table 1

Camera Group					Dedicated Flash Functions
A	B	C	D	E	
•	•	•	•	•	Flash-ready indicator in camera viewfinder/camera display
•	•	•	•	•	Correct exposure indicator in camera viewfinder /camera display
		•	•	•	Underexposure indicator EV in LC display of the flash unit
•	•	•	•	•	Automatic flash sync speed control
•	•	•	•	•	TTL flash control Standard TTL without measuring preflash)
•	•	•	•	•	Automatic fill-in flash control
•	•				Matrix-controlled TTL fill-in flash mode
		•			3D multi-sensor fill-in flash mode
			•		D-TTL and D-TTL 3D flash mode
				•	i-TTL and I-TTL-BL flash mode
				•	Flash exposure measurement memory for i-TTL and I-TTL-BL
•	•	•	•	•	Manual TTL/D-TTL/i-TTL flash exposure correction
		•	•	•	1st or 2nd curtain synchronisation (REAR)
				•	Automatic FP short sync for i-TTL, I-TTL-BL and M
•	•	•	•	•	Automatic motor zoom control
•	•	•	•	•	Extended zoom mode
•	•	•	•	•	Automatic AF measuring beam control
•	•	•	•	•	Automatic flash range indicator
•	•	•	•	•	Programmed auto flash mode
		•	•	•	Preflash for red-eye reduction
		•	•	•	Triggering control / auto flash
				•	Wireless remote flash mode (Advanced Wireless Remote Flash Mode Lighting)
•	•	•	•	•	Wake-up function for the flash unit
				•	Adjusting exposure format (Zoom Size)

 ***It is impossible to describe all camera types and their individual dedicated flash functions within the scope of these instructions. Therefore, please refer to the flash mode description in your camera's operating instructions to find out which functions are supported and which ones have to***

be set manually on the camera. Using lenses not equipped with a CPU (i.e., lenses without auto focus mode), results in certain functional limitations.

3 Preparing the flash unit for use

3.1 Mounting the flash unit

Mounting the flash unit on the camera

 **Turn off the camera and flash before mounting or removing.**

- Turn the knurled nut ⑥ towards the flash unit housing as far as it will go. The locking pin in the adapter shoe is now fully retracted into the case.
- Slide the flash unit foot completely into the camera accessory shoe.
- Turn the knurled nut ⑥ towards the camera housing as far as it will go, clamping the flash unit in place. If the camera does not have a locking hole, the spring-loaded locking pin retracts into the adapter case so as not to damage the surface.

Removing the flash unit from the camera

 **Turn off the camera and flash before mounting or dismantling.**

- Turn the knurled nut ⑥ towards the flash unit housing as far as it will go.
- Remove the flash unit from the camera's accessory shoe.

3.2 Power supply


Suitable batteries/rechargeable batteries

The flash unit can be operated with any of the following batteries:

- 4 NiCad batteries 1.2V, type IEC KR 15/51 (KR6, size AA). They permit very fast recycling times and are economical in use because they are rechargeable.
- 4 nickel-metal-hydride batteries 1.2V, type HR6 (size AA). They have a significantly higher capacity than NiCad batteries and are less harmful to the environment, since they have no cadmium.
- 4 alkaline-manganese dry cell batteries 1.5V, type IEC LR6 (size AA).

Maintenance-free power source for moderate power requirements.


- 4 lithium batteries 1.5V, type IEC FR6 L91 (size AA). Maintenance-free high-capacity power source with a low self-discharge rate.
- Power Pack P76 with connecting cable V58-50 (optional accessory)

 **If your flash unit is not going to be used for an extended period of time, remove the batteries.**

Replacing batteries

The batteries are flat or dead if the recycling time (elapsing from the triggering of a full-power flash, e.g. in the M mode, to the moment the flash ready indicator ⑩ lights up again) exceeds 60 seconds.


- Turn off the flash unit at the main switch ⑮.
- Slide the battery compartment cover ⑧ downwards and fold open.
- Insert the batteries lengthwise as indicated by the battery symbols on the flash unit, and close the battery compartment cover ⑧.


 **When inserting batteries, ensure that the polarity is correct and matches the symbols in the battery compartment. Inserting the batteries in the wrong direction can destroy the flash unit!**
Always replace all batteries simultaneously, and make sure that batteries are the same brand and have the same capacity.
Flat or dead batteries should not be disposed of with ordinary household waste. Help protect the environment, and dispose of flat/dead batteries at the appropriate collection points.

3.3 Switching the flash unit on and off

The flash unit can be turned on by flipping the main switch ⑮ to the „ON“ position.

To turn off the flash unit, flip the main switch ⑮ to the left position.

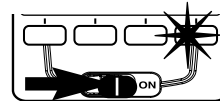

 **If your flash unit is not going to be used for an extended period of time, we recommend turning it off with the main switch and removing the power source (i.e., batteries).**


3.4 Power Pack P76 (optional accessory)

If a battery-operated flash does not meet your needs in terms of number of flashes and recycling times, a Power Pack P76 (optional) can be connected to the flash unit to provide extra power. A V58-50 connecting cable (optional) is necessary for connecting the Power Pack P76 to the flash unit.

 **In this case, no batteries have to be inserted into the flash unit.**

When attaching the Power Pack P76 or the V58-50 connecting cable (accessory) to the flash unit, the main switch of the flash must be in the left „OFF“ position.

The flash unit is then turned on or off using the switch on the Power Pack P76 (see Operating Instructions for the Power Pack).

 **To protect the flash unit from thermal overload when connected to the Power Pack, a monitoring control increases the recycling times during heavy usage. Both flash unit and Power Pack should be switched off before the connecting cable is attached or removed from either unit.**


3.5 Auto OFF for the flash unit

To save battery power and prevent inadvertent battery drain, the flash unit is factory-set to automatically switch to standby mode (Auto OFF) 10 minutes after

- being switched on,
- a flash is fired
- the shutter release is actuated
- the camera's exposure metering system is switched off.


...The flash readiness indicator and the LC display are also switched off.

If the flash is manually switched on again, the last settings prior to the automatic switch off are retained and immediately available. The flash unit can be reactivated by pressing any button or by lightly depressing the shutter release (wake up function).

 **The flash unit should always be turned off using the main switch 15 if it is not going to be used for an extended period.**

If necessary, the Auto OFF function can be set to occur after 1 minute of inactivity, or can be deactivated (see 7.9).


4 Display illumination

Every time a button on the flash unit is pressed, the flash display illumination is activated for 10 seconds. When a flash is fired via the camera or a hand release, the display lighting  16 on the flash unit is switched off.

For some cameras in Groups C, D and E, when the flash unit display illumination is switched on the camera is automatically switched on as well. The inverse is true as well: when the camera display illumination switches on, the flash illumination is also activated.

5 Operating modes (mode menu)

The flash unit supports **TTL**, automatic **A**, manual **M**, and stroboscope modes .

 **Depending on the type of camera, other flash modes may be supported. These flash operating modes can be selected and activated in the mode menu following a data transfer with the camera.**

5.1 Adjusting procedure for flash operating modes

- Press the **Mode** button until the word „Mode“ appears on the display. You can choose from the following operating modes:


TTL TTL flash mode or D-TTL / i-TTL

TTL/BL TTL fill-in flash modes or D-TTL-3D / i-TTL-BL (depending on type of camera)

A Automatic flash mode

M Manual flash mode

 Stroboscope flash mode

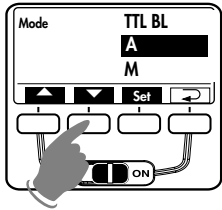

- Set the flash mode of your choice (TTL, automatic A, manual M, etc.) using the ▲ and ▼ arrows. The flash mode you choose is then highlighted. The settings take effect immediately.
- Press the button, and the display changes back to the normal view. If the button is not pressed, the display will change back to the normal view after about 5 seconds.

Flash operation with Group A cameras (see table 1)

The flash parameters for ISO, aperture and lens focal length or mirror position have to be set by hand (see 6). The range indicator on the display matches the set flash parameters.

Flash operation with Group B, C, D and E cameras (see table 1)

The flash parameters for ISO, aperture and lens focal length or mirror position are set automatically if the camera transfers the necessary data to the flash unit. The range indicator on the display of the matches the flash parameters transferred from the camera.

If the camera does not transfer one or more flash parameters to the flash unit, you will have to adjust these settings by hand (see 6).



5.2 TTL flash mode

The TTL flash mode offers a very simple method of achieving excellent flash shots. In this mode, exposure readings are taken by a sensor built into the camera which measures the amount of light through the camera lens (TTL). The electronic control circuit within the camera transmits a stop signal to the flash unit after sufficient light has been emitted, instantly interrupting the flash. The advantage of this flash mode is that all factors influencing correct exposure (filters, change of aperture and focal length with zoom lenses, extensions for close-ups, etc.) are automatically taken into account.

TTL flash mode is supported by all modes of camera operation (such as „P“ for fully automatic settings, „A“ for aperture priority mode, „S“ for shutter priority mode, vari or scene modes, and „M“ for manual mode).

Setting procedure:

- Press the **Mode** button until „Mode“ flashes on the LC display.
- Set the **TTL** flash mode using the ▲ and ▼ arrows. The flash mode you choose is then highlighted. The setting takes effect immediately.
- Press the to change the display back to the normal view. If the button is not pressed, the display will change back to the normal view after about 5 seconds.

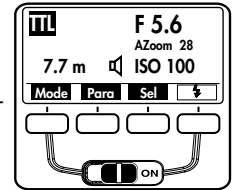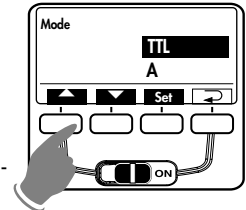


Standard TTL flash mode is only supported by cameras in Groups A, B and C.

D-TTL and I-TTL flash modes


D-TTL and I-TTL flash modes are advanced variants of the normal TTL flash modes used with analog cameras. These modes are supported by Groups D and E cameras (see table 1). Prior to shooting, the flash unit fires a series of barely visible measuring pre-flashes. The camera evaluates the reflected pre-flash light so that the subsequent flash exposure is optimally adapted to the prevailing photographic situation (see your camera's operating instructions).

When the TTL flash mode is selected from the „mode menu“, the flash unit automatically activates standard TTL, D-TTL or i-TTL flash mode, depending on the type of camera (see tables 1 and 2). After the settings are confirmed, will appear in the flash unit display for D-TTL or i-TTL flash modes.

Setting procedure:

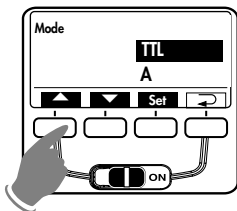

- Press the **Mode** button until „Mode“ flashes on the LC display.
- Set the flash mode **TTL** using the **▲** and **▼** arrows. The flash mode you choose is then highlighted. The setting takes effect immediately.

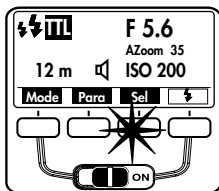

- Press the button **→** to change the display back to the normal view. If the button **→** is not pressed, the display will change back to the normal view after about 5 seconds.


If the shot was properly lit, the correct exposure indication **Ⓜ** will flash „OK“ for about 3 seconds (see 13).

👉 *To test the TTL function with analog cameras, a roll of film has to be in the camera. Please note whether there are limitations for your camera in terms of film sensitivity or ISO (i.e., maximum ISO 1000) for TTL flash operation (see your camera's operating instructions).*


5.3 TTL fill-in flash mode

Fill-in flash **TTL BL** overcomes troublesome dense shadows for daylight shots and produces a more balanced exposure between subject and background with contre-jour shots. The camera's computer-controlled metering system sets the most suitable combination of shutter speed, aperture and flash output. When using a camera from Groups C, D and E (see table 1) with a D-AF Nikkor lens, the distance to the subject is also calculated into the optimal flash performance.

Setting procedure:

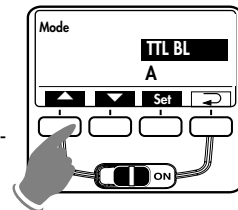

- Press the **Mode** button until „Mode“ flashes on the LC display.
- Set the **TTL BL** flash mode using the **▲** and **▼** arrows. The flash mode you choose is then highlighted. The setting takes effect immediately.

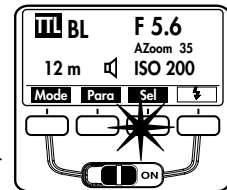

- Press the button **→** to change the display back to the normal view. If the button **→** is not pressed, the display will change back to the normal view after about 5 seconds.

If the shot was properly lit, the correct exposure indication **Ⓜ** will flash „OK“ for about 3 seconds (see 13).


👉 *Ensure that the contre-jour light source does not shine directly into the lens, as this will interfere with the camera's TTL metering system.*

Depending on the camera model, the suitable fill-in flash mode will be automatically activated after **TTL BL** flash mode has been set:



Group A:

- Automatic fill-in flash mode or matrix-controlled fill-in flash mode
- Either set automatically or manually on the camera (see camera's operating instructions)
- Display on flash unit: **TTL**
- No extra settings are necessary on the flash unit, nor is there any display for this mode.



Group B:

- Matrix-controlled fill-in flash mode.
- Settings made on flash unit.
- Display on flash unit after saving: 



Group C:


- 3D multi-sensor fill-in flash mode.
- Settings made on flash unit.
- Display on flash unit after saving:  

Group D:

- D-TTL 3D flash mode.
- Settings made on flash unit.
- Display on flash unit after saving:  

Group E:

- i-TTL BL flash mode (*not with Coolpix cameras*).
- Settings made on flash unit.
- Display on flash unit after saving:  





 **Some cameras do not support TTL fill-in flash mode in combination with SPOT exposure metering. This flash mode will then either be automatically cancelled or cannot be activated in the first place. In this case, normal TTL flash mode, D-TTL or i-TTL modes will be set (see camera's operating instructions).**



5.4 Automatic flash mode

In the automatic flash mode A, the flash unit sensor measures the light that reflects back from the subject. The sensor has a coverage of about 25°, and only measures the light for the time a flash is fired by the mecablitz. The flash is cut off as soon as sufficient light has been emitted for correct exposure. The sensor of the mecablitz has to be directed at the subject.


The maximum range is shown on the LC display. The shortest shot distance is approximately 10% of the maximum distance range. The subject should be located within the middle third of the distance range shown on the LC display to allow the electronic system sufficient leeway for compensation.

Setting procedure:

- Press the **Mode** button until „Mode“ flashes on the LC display.
- Set the flash mode **A** using the  and  arrows. The flash mode selected is then highlighted. The setting takes effect immediately.
- Press the button  to change the LC display back to the normal view. If the button  is not pressed, the display will change back to the normal view after about 5 seconds.

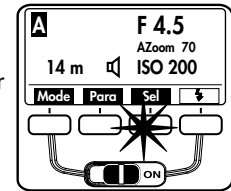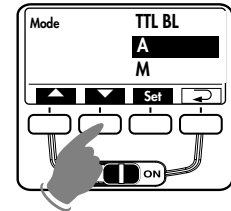

GB

If the shot was properly lit, the correct exposure indication  will flash „OK“ for about 3 seconds (see 13).

5.5 Automatic fill-in flash mode


When shooting in automatic fill-in flash mode in daylight, the automatic flash mode **A** will automatically set a correction of between -1 and -2 f-stops to compensate for flash exposures (see 6.4 and 10.5).

This has a graduated lightening effect on shadowy areas, which has a natural appearance on the photograph.


5.6 Manual flash mode

In the manual flash mode **M**, the flash unit emits the full uncontrolled amount of light if no partial light output has been selected. The specific photographic situation can be taken into account by making adjustments to the aperture setting or by selecting a suitable partial light setting.

Setting procedure:

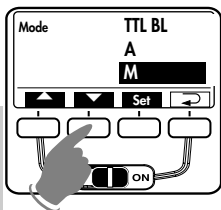


- Press the **Mode** button until „Mode“ flashes on the LC display.
- Choose the flash mode **M** using the **▲** and **▼** arrows. The flash mode M is then highlighted. The setting takes effect immediately.

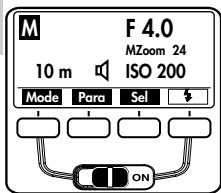

- Press the button **↶** to change the LC display back to the normal view. If the button **↶** is not pressed, the display will change back to the normal view after about 5 seconds.

Set partial light output:

- Press the **Para** button (Parameters) until „P“ flashes on the LC display for partial light output.
- Set the desired light output (1/1-1/256) with the **+** and **-** buttons. The setting takes effect immediately.
- Press the button **↶** to change the LC display back to the normal view. If the button **↶** is not pressed, the display will change back to the normal view after about 5 seconds.

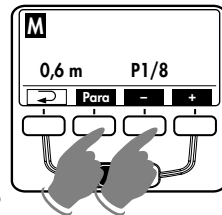

The Mecablitz LC display will indicate the flash-to-subject distance required for a correct flash exposure.


ⓘ *Some cameras only support the **M** manual flash mode when the camera is set to the manual operating mode M.*

5.7 Strobe flash mode


The strobe flash mode **⚡⚡⚡** is a manual flash mode. It allows several flash exposures to be made on a single photo, which can be especially interesting for movement studies or special effect images. In strobe flash mode, several flashes at a certain flash frequency are emitted. For this reason, this function is only possible with a partial light output of 1/4 or less.

The flash frequency (flashes per second) for a stroboscope image can be set between 1 ... 50 Hz in 1 Hz intervals, and the number of flashes can be set between 2 ... 50 in intervals of one.

Setting procedure:

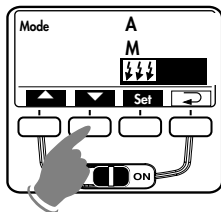

- Press the **Mode** button until „Mode“ flashes on the LC display.
- Choose the flash mode $\downarrow\downarrow\downarrow$ using the \blacktriangle and \blacktriangledown arrows. The flash mode $\downarrow\downarrow\downarrow$ is then highlighted. The setting takes effect immediately.

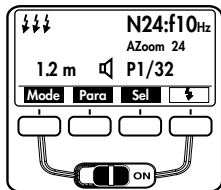

- Press the button \rightarrow to change the LC display back to the normal view. If the button \rightarrow is not pressed, the display will change back to the normal view after about 5 seconds.

Strobe number of flashes (N)


In strobe mode, the number of flashes per shot (N) can be selected. The number of flashes can be set from 2 to 50 in intervals of one. The maximum manual partial light output is automatically adjusted to this number.

Strobe flash frequency (f)

Strobe mode allows you to select the flash frequency (f), which indicates the number of flashes per second. The number of flashes can be set from 2 to 50 in intervals of one. The maximum manual partial light output is automatically adjusted to this number.

Setting procedure:

- Press the **Para** button (Parameters) until the desired flash parameter (N or f) flashes on the LC display.
- Set the desired value using the \oplus and \ominus buttons. The setting takes effect immediately.
- Press the button \rightarrow to change the LC display back to the normal view. If the button \rightarrow is not pressed, the display will change back to the normal view after about 5 seconds.

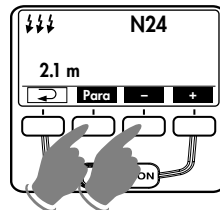


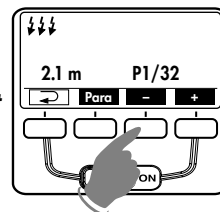
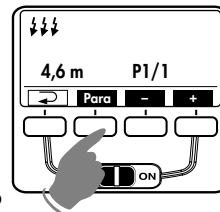
The maximum possible partial light output depends on the ISO and aperture settings, and is automatically set in strobe mode. If you desire short flashes, you can manually reduce the partial light output to the lowest value of 1/256.

The mecablitz LC display will indicate the flash-to-subject distance required for a correct flash exposure, given the parameters selected. By changing the aperture setting or the partial light output, this value can be adjusted to fit the actual distance to the subject.

Setting procedure:

- Press the **Para** button (Parameters) until the desired flash parameter (F=f-stop or P=partial light output) appears on the LC display.
- Set the desired value using the \oplus and \ominus buttons. The setting takes effect immediately.
- Press the button \rightarrow to change the LC display back to the normal view. If the button \rightarrow is not pressed, the display will change back to the normal view after about 5 seconds.

 **Aperture and ISO settings do not appear on the LC display in strobe mode. Strobe mode may not be combined with an operational second reflector.**



GB


6 Flash parameters (Parameter menu)

For the flash unit to operate correctly, various flash parameters such as the zoom position of the main reflector, aperture, ISO light sensitivity, etc. have to be adjusted to match the camera.


When using the flash unit with cameras in Group A (see table 1), these parameters have to be set by hand.

For cameras in Groups B, C, D, or E, the flash parameters are set automatically if the camera is equipped with a CPU-capable lens and transfers the necessary data to the flash unit. For this automatic data transfer to occur, the flash unit has to be mounted on the camera, and both devices have to be switched on. In addition, a data exchange between the camera and flash unit has to be initiated, for which you simply briefly press the shutter release. The maximum range as per the current flash parameters is shown on the display.

6.1 Setting procedure for the flash parameters


 **When a button is pressed for the first time, the LC display is illuminated.**



Depending on the flash mode set, various flash parameters are shown in the menu: For cameras with digital data transfer, the flash parameters for aperture (F), lens focal length (Zoom), and light sensitivity (ISO) are automatically set on the flash unit. The flash parameters for aperture (F) and light sensitivity (ISO) cannot be changed.

 **If the camera is equipped with a non-CPU capable lens (such as a lens without autofocus), the flash parameters for aperture (F) and focal length (Zoom) have to be set manually on the flash unit.**

Press the **Para** button (Parameters) until the desired flash parameter (see below) appears on the LC display.

The following parameters are available:


TTL	TTL-BL	A	M		
—	—	—	—	N	Number of strobe flashe
—	—	—	—	f	Strobe flash frequency
—	—	P	—	P	Manual partial light output
F	—	F	—	F	Aperture
Zoom	—	Zoom	—	Zoom	Mainreflektor position
EV	—	—	—	—	Manual flash exposure correction
ISO	—	ISO	—	ISO	Light sensitivity

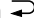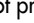- Set the desired value using the **+** and **-** buttons. The setting takes effect immediately.
- Press the button  to change the LC display back to the normal view. If the button  is not pressed, the display will change back to the normal view after about 5 seconds.


6.2 Aperture (F)



If there is no digital data transfer between the camera and flash unit, for example with cameras from Group A (see table 1) or when using non-CPU-capable lenses, the aperture can be manually set from 1.0 to 45 (at ISO 100), in full f-stop intervals. For flash modes A (automatic) and M (manual), the camera and flash unit have to be set to the same aperture.

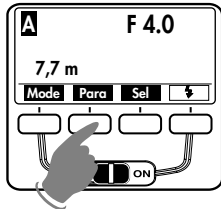
Setting procedure:

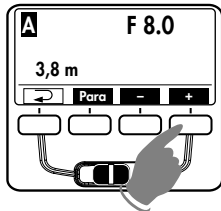

- Press the **Para** button (Parameters) until „F“ flashes on the LC display.



- Set the desired value using the **+** and **-** buttons. The setting takes effect immediately.
- Press the button  to change the LC display back to the normal view. If the button  is not pressed, the display will change back to the normal view after about 5 seconds.


 **During digital data transfer between the camera and flash unit, intermediate values are also adjusted. During TTL flash mode, setting the aperture on the flash unit is only necessary to achieve the correct distance range indication, not for the function of the flash.**

6.3 Main reflector position (Zoom)

If there is no digital data transfer between the camera and flash unit, for example with cameras from Group A (see table 1) or when using non-CPU-capable lenses, the reflector positions 24 mm - 28 mm - 35 mm - 50 mm - 70 mm - 85 mm - 105 mm (35mm format 24 x 36) can be set manually.


MZoom will then appear in the LC display.



Setting procedure:

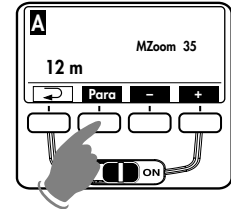

- Press the **Para** button (Parameters) until „MZoom“ appears on the LC display.

- Set the desired value using the **+** and **-** buttons. The setting takes effect immediately.

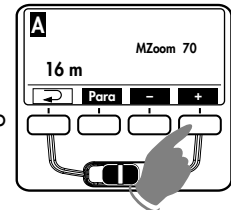

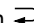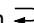- Press the button  to change the LC display back to the normal view. If the button  is not pressed, the display will change back to the normal view after about 5 seconds.


During digital data transfer between the camera and flash unit, the main reflector positions are adjusted automatically.

AZoom will then appear in the LC display.


6.4 Flash exposure correction (EV)

Manual flash exposure correction (EV) can help offset extreme differences in contrast between the subject and background. Corrections from -3 f-stops (EV) to +3 f-stops (EV) can be made, in 1/3 increments (also see 10.5).

Setting procedure:

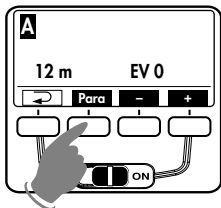

- Press the **Para** button (Parameters) until „EV“ flashes on the LC display.

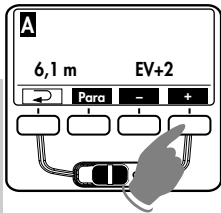


- Set the desired EV value using the **+** and **-** buttons. The setting takes effect immediately.
- Press the button \curvearrowright to change the LC display back to the normal view. If the button \curvearrowright is not pressed, the display will change back to the normal view after about 5 seconds.

6.5 Light sensitivity (ISO)

If there is no digital data transfer between the camera and flash unit, for example with cameras from Group A (see table 1) or when using non-CPU-capable lenses, the ISO can be manually set from 6 to 6400.


For flash modes **A** (automatic) and **M** (manual), the camera and flash unit have to be set to the same ISO value.

Setting procedure:

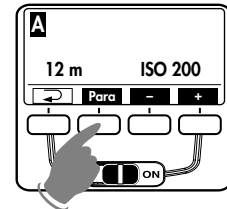

- Press the **Para** button (Parameters) until „ISO“ flashes on the LC display.

- Set the desired ISO value using the **+** and **-** buttons. The setting takes effect immediately.

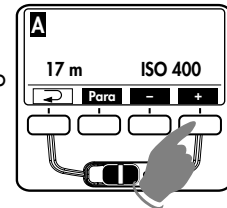


- Press the button \curvearrowright to change the LC display back to the normal view. If the button \curvearrowright is not pressed, the display will change back to the normal view after about 5 seconds.

During TTL flash mode, setting the ISO on the flash unit is only necessary to achieve the correct distance range indication, not for the function of the flash.


6.6 Manual partial light output (P)

In the manual mode **M** and the strobe mode $\downarrow\downarrow\downarrow$, the light output can also be adjusted to fit the shooting situation with the manual partial light output parameter (P). Settings in manual flash mode M range from P 1/1 (full light output) to P 1/256, in intervals of 1/3.

Setting procedure:

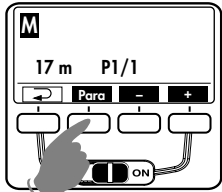

- Press the **Para** button (Parameters) until „P“ appears on the LC display.

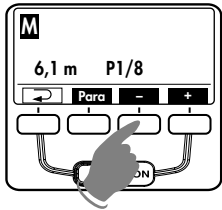

- Set the desired light output (1/1-1/256) with the **+** and **-** buttons. The setting takes effect immediately.
- Press the button \rightarrow to change the LC display back to the normal view. If the button \rightarrow is not pressed, the display will change back to the normal view after about 5 seconds.

- ☞ *In strobe mode $\downarrow\downarrow\downarrow$, the maximum partial light output is automatically adjusted to fit the flash parameters chosen.*
- ☞ *In strobe mode $\downarrow\downarrow\downarrow$, reduction of the manual partial light output is only possible in full intervals.*
- ☞ *When the number of flashes (N) and the flash frequency (f) are reset, the partial light output is not reset.*


7 Special functions (Select menu)

Special functions are selected using the **Sel.** (Select) button. Depending on the camera model and flash mode set, various special functions are available. If certain special functions are not supported by your camera, these functions may not be displayed in the menu. Also see table 2 for more information.

7.1 Setting procedure for the special functions


☞ *When a button is pressed for the first time, the LC display is illuminated.*

- Press the **Sel** key repeatedly until „Select“ appears on the display.
- Use the **▲** and **▼** arrows to select the item of your choice or special function from the menu. The selected menu item will be highlighted against a dark background.

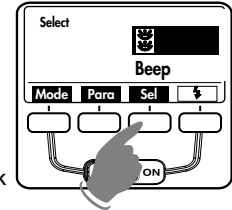

The following special functions are available, depending on the mode and camera model:

TTL	TTL-BL	A	M	$\downarrow\downarrow\downarrow$
				-
Beep	Beep	Beep	Beep	Beep
Remote	Remote	Remote	Remote	Remote
FB	-	-	-	-
Standby	Standby	Standby	Standby	Standby
ML	ML	ML	ML	ML
KEYLOCK	KEYLOCK	KEYLOCK	KEYLOCK	KEYLOCK
Zoom Ext	Zoom Ext	Zoom Ext	Zoom Ext	Zoom Ext
Zoom Size	Zoom Size	Zoom Size	Zoom Size	Zoom Size
m / ft	m / ft	m / ft	m / ft	m / ft
AF-BEAM	AF-BEAM	AF-BEAM	AF-BEAM	AF-BEAM

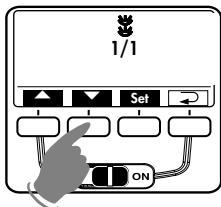

- Press the **Set** key to confirm the special function selection.
- Choose the setting desired using the **▲** and **▼** arrows. The setting takes effect immediately.
- Press the button **↶** repeatedly to return the display to its normal reading. If the button **↶** is not pressed, the display will change back to the normal view after about 5 seconds.

7.2 Beep function (Beep)

The beep function allows the user to receive an acoustic signal for certain functions of the flash unit. This allows the photographer to concentrate fully on the subject and taking the picture, and not have to worry about any optical status indicators.

The beep function signals when the flash is ready, when the correct flash exposure has been reached, or when an error occurs.

Acoustic signals after the flash unit has been turned on:

- A short (about two seconds) uninterrupted beep signal after turning the flash on indicates that the flash unit is ready.

Beep signals after taking a photograph:



- A short (about two seconds) uninterrupted beep signal directly after a picture is taken indicates that the shot was exposed correctly and the flash is ready again. If no beep signal sounds, then the shot was underexposed.
- A broken (---) beep signal directly after a shot indicates that the shot was correctly exposed. The flash is only ready however after a second (about two seconds) continuous beep.

Beep signals when adjusting automatic mode settings:


- A short beep signal as an alarm in automatic mode indicates that the aperture and ISO settings exceed the permissible light control range. The auto aperture of the mecablitz is then automatically adjusted to the next permissible value.

Setting procedure:

- Press the **Set** button repeatedly until „Select“ appears on the display.
- Use the **▲** and **▼** buttons to select „BEEP“ from the menu. The selected menu item will be highlighted against a dark background.
- Press the **Set** key to confirm the special function selection.
- Choose the setting desired using the **▲** and **▼** arrows. The setting takes effect immediately.
- Press the button **↶** repeatedly to return the display to its normal reading. If the key **↶** not pressed, the display will switch back to normal automatically after approximately 5 seconds.

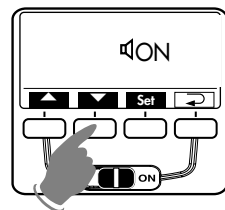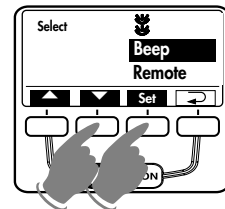

🔊 *When the beep function is turned on, the symbol **🔊** is also displayed on the LC display.*

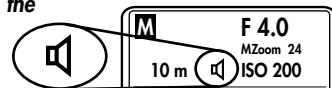


7.3 Flash Bracketing Series (FB)


A series of flash exposures (flash-bracketing FB) can be carried out in the TTL and automatic **A** flash modes. A flash bracketing series consists of three successive flash shots with different flash exposure correction values.

When a flash bracketing series is set, FB and the correction value appear on the display. The possible correction values range from 1/3 to 3 apertures in one-third aperture increments.

Setting procedure:

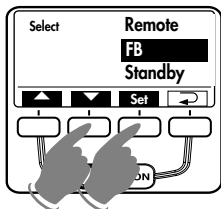


- Press the **Sel** button repeatedly until „Select“ appears on the display.
- Select the menu option „FB“ by pressing the **▲** and **▼** buttons. The selected menu option will be highlighted.

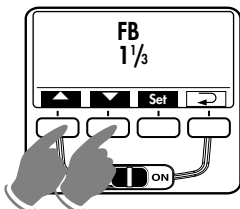


- Confirm the selection of the special function by pressing the **Sel** button.
- Select the desired setting with the **▲** and **▼** buttons. The setting takes effect immediately.
- Press the button **↶** repeatedly until the screen is reset to its normal view. If the button **↶** is not pressed, the display is automatically reset to its normal view after about 5 seconds.

- The first shot is taken without a correction value.

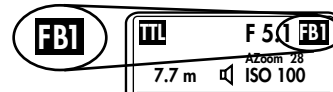

- „FB 1“ will also appear on the display.
- The second shot is taken with minus correction. „FB 2“ and the minus correction value (EV) will also appear on the display.
- The third shot is taken with plus correction. „FB 3“ and the plus correction value (EV) will also appear on the display.

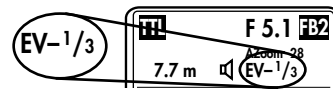

- After the third shot, the flash bracketing series is automatically deleted. „FB“ will disappear from the display.

When the flash bracketing series is set, the correction value is always shown as a positive value!

Flash bracketing series in the TTL flash mode

A flash bracketing series in the TTL flash mode is only possible if the camera supports the setting of a manual flash exposure correction on the flash unit (see camera instruction manual)! Otherwise, the shots are taken without a correction value!

Flash bracketing in automatic flash mode A

The type of camera is not important for a flash bracketing series in automatic flash mode A.

7.4 Extended Zoom Mode (Zoom Ext)


In the extended zoom mode, the focal length of the main reflector is reduced to one level below the focal length of the camera lens. The resulting broader light coverage provides additional dispersed light (reflections) inside rooms so that a softer flash illumination is possible.

Example:


The focal length of the camera lens is 50 mm. The extended zoom mode sets a 35 mm reflector position on the flash unit. However, 50 mm continues to be shown on the display.

- When „Ext ON“ is displayed, the extended zoom mode is activated.
- When „Ext OFF“ is displayed, the extended zoom mode is deactivated.


Setting procedure:

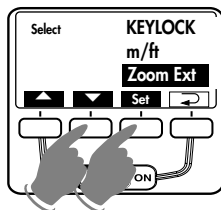

- Press the **Set** button repeatedly until „Select“ appears on the display.
- Select the menu option „ZoomExt“ by pressing the **▲** and **▼** buttons. The selected menu option will be highlighted.
- Confirm the selection of the special function by pressing the **Set** button.

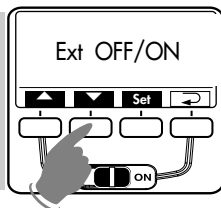

- Select the desired setting with the **▲** and **▼** buttons. The setting takes effect immediately.
- Press the button **↻** repeatedly until the screen is reset to its normal view. If the button **↻** is not pressed, the display is automatically reset to its normal view after about 5 seconds.

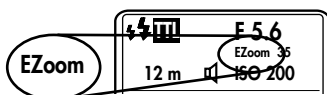

Once the extended zoom mode is activated, „EZOOM“ will appear on the display next to the focal length.

ⓘ Depending on the system, the extended zoom mode is supported for lens focal lengths of 28 mm or more (35mm format). The camera must be equipped with a CPU lens and be able to transfer data on the lens focal length to the flash unit.


7.5 Adjusting exposure format (Zoom Size)

With some digital cameras it is possible to adjust the light angle of the main reflector to suit the chip format (the dimensions of the image recording module).

- When „Size ON“ appears, Zoom Size is activated.
- When „Size OFF“ appears, Zoom Size is deactivated.


Setting procedure:

- Press the **Set** button repeatedly until „Select“ appears on the display.
- Select the menu option „ZoomSize“ by pressing the **▲** and **▼** keys. The selected menu option will be highlighted.

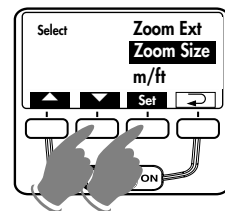


- Confirm the selection of the special function by pressing the **Set** button.

- Select the desired setting with the **▲** and **▼** keys. The setting takes effect immediately.
- Press the button **↻** repeatedly until the screen is reset to its normal view. If the button **↻** is not pressed, the display is automatically reset to its normal view after about 5 seconds.

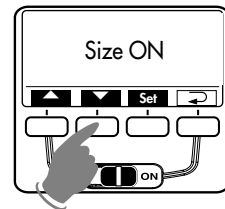

Once the Zoom Size mode is activated, „SZOOM“ will appear on the display next to the focal length.

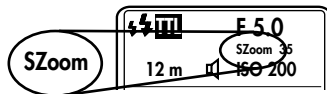


ⓘ Refer to your camera's instruction manual for further information.

ⓘ The Zoom size function cannot be set with cameras which do not support shooting format adjustment!


7.6 Cordless remote mode (Remote)

- When „Remote OFF“ appears, the cordless remote mode is deactivated.
- When „Remote Master“ appears, the flash unit is operating as a guiding master flash unit on the camera.
- When „Remote Slave“ appears, the flash unit is operating completely as a slave flash unit. See also Section 21.


Setting procedure:

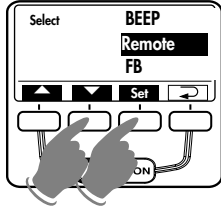

- Press the **Set** button repeatedly until „Select“ appears on the display.
- Select the „Remote“ menu option by pressing the **▲** and **▼** buttons. The selected menu option will be highlighted.

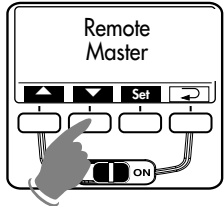

- Confirm the selection of the special function by pressing the **Set** button.
- Select the desired setting with the **▲** and **▼** buttons. The setting takes effect immediately.

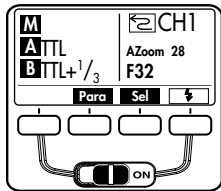


- Press the button **↶** repeatedly until the screen is reset to its normal view. If the button **↶** is not pressed, the display is automatically reset to its normal view after about 5 seconds.

7.7 Meter-Feet changeover (m/ft)



The maximum flash range indicated by the flash unit's display can either be shown in meters or feet. The setting can be adjusted under the menu option m/ft.

Setting procedure:

- Press the **Set** button repeatedly until „Select“ appears on the display.
- Select the „m/ft“ menu option by pressing the **▲** and **▼** buttons. The selected menu option will be highlighted.

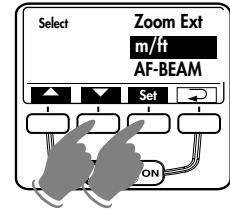

- Confirm the selection of the special function by pressing the **Set** button.
- Select the desired setting with the **▲** and **▼** buttons. The setting takes effect immediately.
 - When „m“ is displayed, distances will be shown in meters.
 - When „ft“ is displayed, distances will be shown in feet.
- Press the button **↶** repeatedly until the display is reset to its normal state. If the button **↶** is not pressed, the display is automatically reset to its normal view after about 5 seconds.

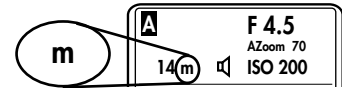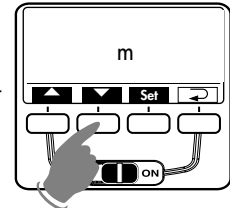

GB

7.8 Secondary reflector


The secondary reflector ⑨ is used for frontal brightening in the case of indirect lighting when the main reflector ⑦ is pivoted to the side or upwards (see 10.3).

If the secondary reflector ⑨ produces too much light, it can be reduced to 1/2 or 1/4 .


- „Off“ setting: Secondary reflector is turned off.
- „P1 / 1“ setting: secondary reflector is operating at full light output.
- „P1 / 2“ setting: secondary reflector is operating at 1/2 light output.
- „P1 / 4“ setting: secondary reflector is operating at 1/4 light output.

When the secondary reflector is activated and the setting is saved, a symbol ⑨ will appear in the display.


Setting procedure:

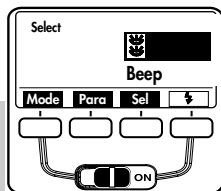

- Press the **Sel** button repeatedly until „Select“ appears on the display.
- Select the menu option ⑨ by pressing the **▲** and **▼** buttons. The selected menu option will be highlighted.

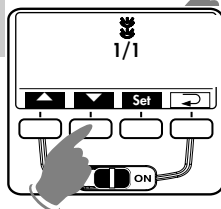

- Confirm the selection of the special function by pressing the **Sel** button.
- Select the desired setting with the **▲** and **▼** buttons. The setting takes effect immediately.
- Press the button **↶** repeatedly until the display is reset to its normal state. If the button **↶** is not pressed, the display is automatically reset to its normal view after about 5 seconds.

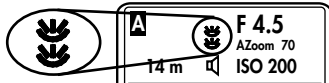

➔ **Please also refer to the information in Section 10.3!**



7.9 Modelling Light (ML)

The modelling light is a high-frequency stroboscopic flash. It creates the impression of a semi-permanent light for a duration of about 3 seconds. The modelling light enables the user to assess light distribution and the formation of shadows before taking pictures.

- The modelling light is activated when „ML ON“ is displayed.
- The modelling light is deactivated when „ML OFF“ is displayed.


Setting procedure:

- Press the **Sel** button repeatedly until „Select“ appears on the display.
- Select the menu option „ML“ by pressing the **▲** and **▼** buttons. The selected menu option will be highlighted.
- Confirm the selection of the special function by pressing the **Sel** button.
- Select the desired setting with the **▲** and **▼** buttons. The setting takes effect immediately.
- Press the button **↶** repeatedly until the screen is reset to its normal state. If the button **↶** is not pressed, the display is automatically reset to its normal view after about 5 seconds.

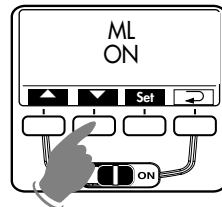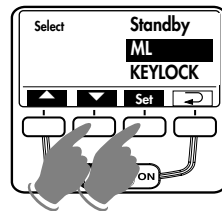

Once the modelling light function is activated, the symbol ⑨ is displayed on the flash-ready indicator ⑩ or the manual firing button. The modelling light is activated when the manual firing button ⑩ is pressed.

➔ **When the flash unit functions as master in the cordless remote system, the activation of the modelling light also activates the modelling light of slave flash units (see 21.4).**

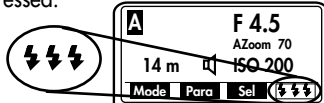

The secondary reflector ~ is not supported by the modelling light function!


7.10 Auto OFF Function (Standby)

To save battery power and prevent inadvertent battery discharge, the flash unit is factory-set to automatically switch over to standby mode, while flash readiness and the LC display are switched off about 10 minutes after -

- Switch on
- Firing a flash,
- Activating the shutter release
- Switching off the camera's exposure metering system.

If the flash is manually switched on again, the last settings prior to the automatic switch off are retained and immediately available. The flash unit is reactivated merely by depressing any of the buttons or by touching the shutter release (wake-up function).

The flash unit should always be turned off by the main switch ⑤ if it is not going to be used for an extended period!

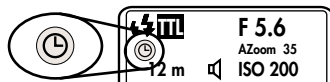


A corresponding symbol © appears on the display when the Auto-OFF function is activated.


The flash unit switches to the energy-saving Standby mode when it is not in use for more than 1 or 10 minutes, depending on the setting. It is reactivated by depressing any button or by touching the shutter release (wake-up function).

Setting procedure:

- Press the **Sel** button repeatedly until „Select“ appears on the display.
- Select the „Standby“ menu option by pressing the **▲** and **▼** buttons. The selected menu option will be highlighted.

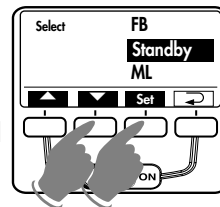

- Confirm the selection of the special function by pressing the **Set** button.
- Select the desired setting with the **▲** and **▼** buttons.
 - When „Standby 10min“ is displayed, the Auto OFF function will be activated after 10 minutes.
 - When „Standby 1 min“ is displayed, the Auto OFF function will be activated after 1 minute.
 - When „Standby OFF“ is displayed, the Auto OFF function is deactivated.

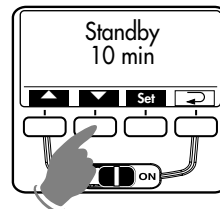


The setting takes effect immediately.

- Press the button **↶** repeatedly until the screen is reset to its normal state. If the button **↶** is not pressed, the display is automatically reset to its normal state after about 5 seconds.


ⓘ *With analog cameras that do not support the TTL flash unit, the wake-up function cannot be activated by touching the shutter release.*



GB


7.11 KEYLOCK

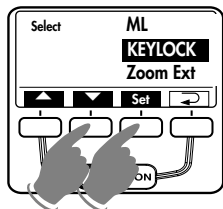

The KEYLOCK function enables the user to lock the buttons on the flash unit to prevent them from inadvertently being pressed. When the KEYLOCK function is activated, a symbol  appears on the display above the two middle buttons.

Activating the Key-Lock function:

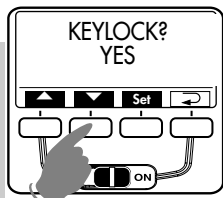


- Press the **Sel** button repeatedly until „Select“ appears on the display.
- Select the menu option „KEYLOCK“ by pressing the  and  buttons. The selected menu option will be highlighted.
- Confirm the selection of the special function by pressing the **Set** button.




- Using the  and  keys, select the menu item “KEYLOCK? YES” and confirm the settings by pressing the **Set** button.

The keypad lock is activated and the screen immediately switches back to normal display.

Deactivating the Key-Lock function

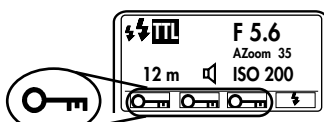





When a button is pressed, „UNLOCK Press these keys“ is displayed. A corresponding symbol  is displayed to indicate that the buttons are locked. To deactivate the Key-Lock function, press both middle buttons for about 3 seconds. The display is reset to its normal state when the Key-Lock function is deactivated.



7.12 AF-BEAM (AF auxiliary light)

If the AF metering system of a digital AF reflex camera is unable to focus due to insufficient ambient lighting, the camera activates the AF auxiliary light built into the flash unit. This projects a stripe pattern onto the subject which the camera uses to focus.


The “AF BEAM” function can be specifically turned off in the select menu of the flash unit.

Setting procedure:

- Press the **Sel** key repeatedly until "Select" appears on the screen.
- With the  and  button, select the menu item “AF BEAM” The selected menu item will be highlighted with a dark bar.
- Press the **Set** button and confirm the setting of the special function.
- Turn the function off with the  and  buttons.

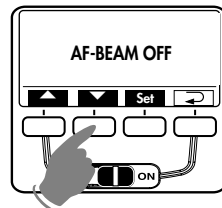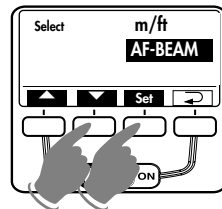

Once the setting has been saved, the deactivated AF beam function is indicated by a crossed-out AF icon in the display.

 **When the AF-BEAM function is deactivated, it is possible that the camera can no longer focus in the dark.**



8 Motor Zoom Reflector

The zoom position of the main reflector can be adjusted for focal lengths of at least 24 mm (35 mm format). For lenses with focal lengths of 12 mm or more, the integrated wide-angle diffuser ② can be positioned over the main reflector ⑦.

The following zoom positions are available:

24 mm - 28 mm - 35 mm - 50 mm - 70 mm - 85 mm - 105 mm (corresponding to 35 mm format)

☞ **When using the wide-angle diffuser ② the main reflector ⑦ is automatically moved to the 24 mm position! Because of the wide-angle diffuser, 12 mm appears on the display (see 9).**

Automatic zoom adjustment

The main reflector's automatic zoom adjustment is supported by cameras from Groups B, C, D and E when these are equipped with a CPU lens. The zoom position automatically adjusts to the focal length of the lens. AZoom and the position of the reflector (mm) are indicated on the flash unit's display.

Manual zoom adjustment

When the flash unit is used with a camera from Group A or a lens without a CPU, the zoom position of the main reflector ⑦ must be set manually. MZoom is indicated on the display. Adjusting the setting - see 6.3

☞ **If you use a zoom-lens and do not necessarily need the full guide number and maximum flash range of the flash unit you can leave the zoom reflector at the position for the shortest focal length of the zoom lens. This will provide full light coverage of the picture and eliminate the need to continually adjust it to the focal length of the lens.**

Example:

You use a zoom lens with a focal length range of 35 mm to 105 mm. In this case, set the position of the main reflector ⑦ to 35 mm!

Manual adjustment of the zoom position with AZoom

The zoom position of the main reflector ⑦ can also be changed when the flash unit is used with a camera capable of data transmission, in order to achieve special lighting effects (such as hot-spot, etc.). See also 6.3.

Once saved, „MZoom“ will be indicated on the display.

Resetting to AZoom mode

- Touch the shutter release to begin a data transfer between the flash unit and the camera.
- Continue changing the zoom position until AZoom appears on the display.

9 Wide-angle diffuser

With the wide angle diffuser ②, focal lengths of 12 mm or more can be illuminated (35 mm format).


Pull the wide-angle diffuser ② out from the main reflector ⑦ as far as it will go, and then release it. The wide-angle diffuser automatically folds downwards.

The main reflector automatically moves to the required position. The distance readings and the zoom value are corrected to 12 mm on the display panel. To insert the wide-angle diffuser ②, turn it upwards 90° and push it all the way in.

Mecabounce 58-90

If the Mecabounce 58-90 (optional accessories, see 25) is fitted to the main reflector ⑦ of the flash unit, the main reflector is automatically guided to the position required. The distance data and zoom factor are corrected to 16 mm.

☞ **The simultaneous use of the wide-angle diffuser and the Mecabounce is not possible.**

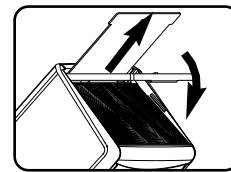

10 Flash techniques

10.1 Bounce flash

Bounce flash illuminates the subject more softly and reduces dense shadows. It also reduces the drop in light from foreground to background that occurs for physical reasons.


The main reflector ⑦ of the flash unit can be swivelled horizontally and tilted vertically for bounce flash. To do this, depress the reflector unlocking button ③ and tilt the reflector ⑦. To avoid colour cast in your shots, the reflective surface should be colour-neutral or white. For frontal fill-in lighting, the secondary reflector ⑨ can also be activated in the Select Menu (see 7.8).

🔧 When tilting the main reflector vertically, make sure that it is turned through an angle that is wide enough to prevent direct light from falling on the subject. The reflector should be tilted at least as far as the 60° lock-in position.

Flash ranges do not appear on the display when the main reflector is turned.

10.2 Bounce flash with a reflector card


The use of bounce flash with the integrated reflector card ① can bring out highlights in the eyes of human subjects.

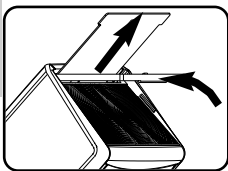

- Tilt the reflector head upwards by 90°.
- Pull the reflector card ① together with the wide-angle diffuser ② above out from the reflector head
- Hold the reflector card ① and insert the wide-angle diffuser ② into the reflector head.

10.3 Bounce flash with secondary reflector

When the main reflector ⑦ is swivelled or tilted, the secondary reflector ⑨ can also be activated in the Select Menu for frontal fill-in lighting of the subject (see 7.5).

Using the secondary reflector ⑨ is generally practical and feasible only for bounce flash with a swivelled or tilted main reflector ⑦. If the main reflector is not swivelled or tilted, the secondary reflector will not be activated for the shot. The symbol  will then flash on the display panel.


When the secondary reflector is activated, the light from the flash unit will be reflected by the main reflector and by the secondary reflector. These values may vary somewhat when the flash is used with partial light output levels. If the light from the secondary reflector is too bright, it can be reduced by half in the Select Menu (see 7.8).

🔧 The secondary reflector is not supported by the stroboscopic, modelling light (ML) and remote flash modes. The secondary reflector does not flash when the main reflector is in its normal position or is tilted downwards.

10.4 Close-ups / macro shots

In close-ups and macro shots, parallax error between the flash unit and lens may result in shadows on the lower edge of the image. To compensate for this, the main reflector can be tilted downwards by an angle of -7°. To do this, depress the reflector release button ⑩ and tilt the reflector downward.

🔧 If the main reflector is tilted downwards, "TILT" is shown on the display to indicate this.

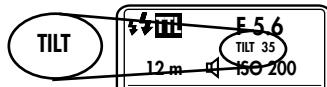

Certain minimum lighting distances must be maintained for close-up shots to avoid overexposure.

🔧 The minimum lighting distance is approximately 10% of the maximum flash range indicated on the LC display. For close-up shots, make sure that the flash light is not shaded by the lens.

10.5 Manual flash exposure corrections

The auto flash exposure mode of the flash unit, as of most cameras, is adjusted to a reflection factor of 25% (the average reflection factor of flash subjects). A dark background that absorbs much of the light or a highly reflective bright background (backlit shots, for example) may result in, respectively, underexposure or overexposure of the subject.

To offset these effects, the flash exposure can be adjusted manually for the shot with a correction value. The extent of the correction depends on the contrast between subject and background.

In TTL and automatic flash modes, manual flash exposure correction factors of from -3 EV (f-stops) to +3 EV (f-stops) can be adjusted on the flash unit in one-third increments.

Many cameras have a setting element for exposure corrections that can also be used in TTL flash mode. Please refer to the information in the camera's operating instructions.


Dark subject in front of a bright background:

Positive correction value (approximately +1 to +2 f-stops EV).


Bright subject in front of a dark background:


Negative correction value (approximately -1 to -2 f-stops EV).

When a correction value is set, the flash range indicated on the flash unit display may change as it adjusts to the correction value (depending on the type of camera). For adjustments, see 6.4.

 **Manual flash exposure correction is possible in TTL flash mode only if the camera supports this function (consult the camera's operating instructions). If the camera does not support this function, the adjusted correction value will have no effect. For some camera models, the manual flash exposure corrections must be adjusted on the camera. If this is the case, no correction value will appear on the flash unit display.**

11 Flash readiness indication

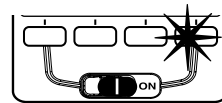

When the flash capacitor is charged, the flash readiness symbol  ⑯ lights up on the flash unit, indicating that the flash is ready to fire. This means that flash light can be used for the next shot. Flash readiness is also transmitted to the camera and indicated accordingly in the camera's viewfinder (see 15).

If a shot is taken before the flash readiness indicator appears in the camera's viewfinder, then the flash unit will not be triggered and, if the camera has already switched to flash sync speed (see 12), the shot may have the wrong exposure.


 **The multi-zone AF measuring flash ⑪ integrated into the flash unit can be activated by AF cameras only when flash readiness is indicated (see 20).**

12 Automatic flash sync speed control


Depending on the camera model and camera mode, the shutter speed is switched to flash sync speed when flash readiness is reached (see the camera's operating instructions).

Shutter speeds cannot be set faster than the flash sync speed, or they are switched automatically to the flash sync speed. Various cameras have a sync speed range, for example from 1/30 sec. to 1/125 sec (see the camera's operating instructions). The sync speed set by the camera depends on the camera mode, the ambient light, and the focal length of the lens used.

Shutter speeds slower than the flash sync speed can be set according to the camera mode and the selected flash synchronisation (see also the camera's operating instructions and 18).

 **If a camera with a between-the-lens shutter (see the camera's operating instructions) or FP high-speed synchronisation (see 18.4) is used, flash sync speed is not controlled automatically. As a result, the flash can be used at all shutter speeds. If you need the full light output of the flash unit, you should not select a shutter speed that is any faster than 1/125 sec.**

13 Correct exposure indication

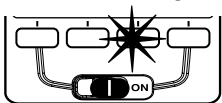

The correct exposure indication „OK“ ⑭ only lights up if the shot was correctly exposed in TTL flash mode (3D-TTL, D-TTL, i-TTL, etc.) or automatic flash mode.

If no „OK“ exposure indication ⑭ appears after the shot, then the shot was underexposed. You will need to repeat the shot with the next smaller f-number (for example, f/8 instead of f/11), or the distance to the subject or reflecting surface (for example with bounce flash) will have to be reduced. Note the maximum flash range indicated on the display of the flash unit (see 16). For information on the correct exposure indicator in the camera viewfinder, see also 15.

14 Underexposure warning in TTL flash mode

In certain modes („P“ and „A“, for example), some Group C, D and E Nikon cameras (see Table 1) respond to an underexposed flash shot with a warning on the display of the flash unit, indicating the amount of underexposure in f-stops (see the camera's operating instructions).


If the correct exposure indication „OK“ ⑭ does not light up on the flash unit after a flash shot is taken, or if the flash symbol blinks in the camera viewfinder, then the display of the flash unit will briefly indicate the underexposure in f-stops ranging from -0.3 EV to -3.0 EV in one-third increments.


In borderline instances the flash unit will not display an „OK“, or the flash symbol will blink in the camera viewfinder, even though the exposure is correct. In this instance, no indication will appear on the LC display of the flash unit.


🔧 To enable underexposure warnings, the TTL mode (or 3D-TTL, D-TTL, i-TTL, etc.) must be set on the flash unit.

15 Displays in the camera viewfinder

Examples of displays in the camera viewfinder:

A green arrow symbol  lights up:
Command to switch on or use the flash unit.

A red arrow symbol  lights up:
The flash unit is ready for firing.


A red arrow symbol  remains lit up after the shot or goes out briefly:
The exposure was correct.

A red arrow symbol  blinks after shooting:
The shot was underexposed.

🔧 For information applicable to the displays in the viewfinder of your camera model, refer to the camera's operating instructions.

GB

16 Flash range indication

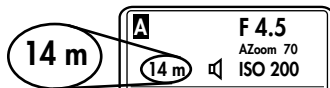


The maximum flash range is indicated on the display panel of the flash unit. The value indicated relates to subjects with a reflection factor of 25%, which applies to

most photographic situations. Strong deviations from this reflection factor, as in the case of highly reflective or poorly reflective subjects, may affect the flash range.

In TTL and automatic flash mode, the subject should be in the middle third of the indicated range. This will give the automatic exposure control sufficient scope for compensation.

To avoid overexposure, the minimum distance from the subject should be no less than 10% of the indicated value. An adjustment can be made to a particular photographic situation by changing the aperture setting, for example.

In manual flash mode M, the distance that must be maintained from the subject for correct flash exposure is indicated. An adjustment to the photographic situation at hand can be achieved by, for example, changing the aperture setting on the lens and by selecting either full light output or „P“ for a partial light output level.

 **The flash range can be expressed in either meters (m) or feet (ft) according to the chosen setting (see 7.7). There is no flash range indication in remote mode or when the main reflector is swivelled or tilted.**

16.1 Automatic adjustment of the flash range indication

Group B, C, D and E cameras transmit to the flash unit the flash parameters for ISO film speed, focal length of the lens (mm), aperture and exposure correction. The flash unit automatically adjusts its settings accordingly. The maximum flash range is calculated from the flash parameters and the guide number and indicated on the display.

This requires an exchange of data between camera and flash unit, effected for example by tapping the shutter release.

Automatic adjustment of the maximum flash range display requires that the camera be equipped with a suitable CPU lens (see 6).

16.2 Manual adjustment of the flash range indication

If the flash unit is used with a Group A camera, then zoom position, ISO film speed and f-stop parameters must be adjusted manually on the flash unit if the flash range indication is to be reliable (see Chapter 6).

16.3 „FEE“ error indication on the flash unit's LC display

On some cameras and in some camera modes (for example, program „P“, vari-programs, „S“ shutter priority mode), it is necessary to set the aperture ring of the lens to the maximum f-number. Otherwise the error message „FEE“ will appear on the LC display of the flash unit or camera. If this occurs, check the settings on the camera or the lens (see the camera's operating instructions).

16.4 Guide number indication when using lenses without CPU

Lenses without CPU (i.e., without electronic data transmission) do not transmit information about focal length or the aperture setting to the camera. If such a lens is used with a Group B, C, D or E camera, then the flash unit will receive only ISO data from the camera. The position of the main reflector must be adjusted manually (see 6.3).

With some cameras the flash unit's LC display will, in this case, show the guide number for the current setting instead of the distance. The maximum flash range is derived from the equation:


$$\text{Maximum flash range} = \frac{\text{guide number}}{\text{aperture}}$$

 **Guide numbers are not displayed when the main reflector is tilted down.**

17 Flash exposure memory

Some Group E cameras (see Table 1) have flash exposure memory (FV memory). This is supported by the flash unit in i-TTL flash mode. It can be used to define and store the exposure level for the subsequent shot before the shot is actually taken. This can be useful when, for example, the flash exposure has to be adjusted to specific details that may not necessarily be identical with the main subject.

This function is activated on the camera, in some instances as an individual function. The subject detail to which the flash exposure is to be adjusted is sighted and brought into focus with the AF sensor/metering window in the camera. When the AE-L/AF-L button (the terminology may vary with the camera model) on the camera is pressed, the flash unit fires a test flash. The stored metering value (e.g., „EL“) is then displayed in the camera viewfinder. The camera uses the reflected light of the test flash to determine the light output required for the subsequent exposure. The actual main subject can then be brought into focus with the camera's AF sensor/metering window. When the shutter release is pressed, the picture will be exposed with the previously defined light output of the flash unit.

 For more detailed information on adjustments and handling, refer to the camera's operating instructions.

18 Flash synchronisation

18.1 Normal synchronisation

In normal synchronisation the flash unit is triggered at the beginning of the shutter time (first curtain synchronisation). Normal synchronisation is the standard mode on all cameras. It is suitable for most flash shots.

The camera, depending on the mode being used, is switched to the flash sync speed. Speeds between 1/30 sec. and 1/125 sec. are customary (see the camera's operating instructions). No settings are necessary on the flash unit, nor is there any display for this mode.




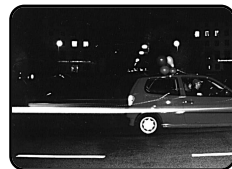
18.2 Second curtain synchronisation (rear mode)

Some cameras offer the option of second-curtain synchronisation (rear mode), in which the flash unit is not triggered until the end of the exposure time. This is particularly advantageous when used with slow shutter speeds (slower than 1/30 sec.) and moving subjects that have their own source of light. With second-curtain synchronisation, a moving light source will trail a light streak instead of building one up ahead of itself, as it does when the flash is synchronised with the first shutter curtain.

Second-curtain synchronisation thus produces a more „natural“ image of the photographic situation when there are moving light sources. Depending on its operating mode, the camera sets shutter speeds slower than its sync speed.


On some cameras the rear function is not possible in certain operating modes (e.g., certain vari- or subject programs, or with red eye reduction). In that case, the rear mode cannot be selected, or the rear function is automatically cancelled or ignored. For more information, refer to the camera's operating instructions.

 For Group A, C, D and E cameras, it must be set on the camera (see the camera's operating instructions). Use a tripod when shooting with slow shutter speeds to avoid blurred images.



18.3 Slow synchronisation (SLOW)


A slow exposure (SLOW) gives added prominence to the image background at lower ambient light levels. This is achieved by adjusting the shutter speed to the ambient light. Accordingly, shutter speeds that are slower than the flash sync speed (e.g., shutter speeds up to 30 sec.) are automatically adjusted by the camera. Slow synchronisation is activated automatically on some camera models in connection with certain camera programs (e.g., a night shot program, etc.), or it can be set on the camera (see the camera's operating instructions). No settings are necessary on the flash unit, nor is there any display for this mode.

 *Slow synchronisation (SLOW) is set on the camera (see the camera's operating instructions). Use a tripod when shooting with slow shutter speeds to avoid blurred images.*

18.4 Automatic FP high-speed synchronisation

Various Group E cameras (D2Hs and D200, for example) support automatic FP high-speed synchronisation (see the camera's operating instructions). This flash mode makes it possible to use a flash unit even with shutter speeds that are faster than the flash sync speed. Interesting results may be achieved in this mode when, for example, a wide open aperture (e.g., f/2.0) is used to limit the depth of field in portrait shots taken in very bright ambient light. The flash unit supports high-speed synchronisation in i-TTL, i-TTL-BL and M flash modes.

For physical reasons, however, FP high-speed synchronisation significantly reduces the guide number and the maximum flash range. Be sure to note, therefore, the flash range on the LC display of the flash unit. FP high-speed synchronisation is activated automatically if a shutter speed faster than the flash sync speed is set on the camera, whether manually or automatically by the exposure program.


 **Note that in the case of FP high-speed synchronisation the guide number of the flash unit also depends on the shutter speed. The faster the shutter speed, the lower the guide number.**

Automatic FP high-speed synchronisation is set on the camera (see the camera's operating instructions). „FP“ will then also appear on the flash unit's display panel, for example.

19 Preflash function for red-eye reduction


The red-eye effect occurs when the person being photographed is looking more or less straight into the camera, the ambient lighting is poor, and the flash unit is mounted close to the camera. The flash unit then illuminates the interior of the subject's eyes through the pupils.




Some camera models have a preflash function for reducing the red-eye effect. One or more preflashes induce the pupils to contract more, thereby reducing the red-eye effect.

 **On some cameras, the preflash function supports only the camera's internal flash unit or an illuminator incorporated in the camera body (see the camera's operating instructions). The preflash function is set on the camera**

(see the camera's operating instructions). **Second curtain synchronisation (REAR) is not possible when the preflash function is used.**

20 Multi-zone AF measuring beam

The multi-zone AF measuring beam  is activated in the flash unit by the camera when the ambient lighting conditions become inadequate for automatic focusing. It projects onto the subject a striped pattern that the camera can use to focus. Depending on the camera's activated AF sensor, the AF beam has a range of approximately 6 m to 9 m (with a standard 1.7/50 mm lens). The maximum flash range is reached with the camera's central AF sensor. Parallax error between lens and AF measuring beam limits the close-up range with the AF measuring beam to approximately 0.7 m to 1 m.

 **If the multi-zone AF measuring beam  is to be activated by the camera, the „single AF (S)“ autofocus mode must be set on the camera and the flash unit must indicate flash readiness. Some camera models support only the camera's internal AF measuring beam. In this case, the multi-zone AF measuring beam  of the flash unit is not activated (as in the case of compact cameras; see the camera's operating instructions).**

Low-speed zoom lenses can significantly curtail the range of the AF measuring beam.


Some cameras support the AF measuring beam in the flash unit only with the camera's central AF sensor. If a peripheral AF sensor is selected, then the AF measuring beam will not be activated in the flash unit.

21 Wireless remote operation


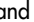






Wireless remote operation is compatible with the Nikon Advanced Wireless Lighting system. In this system, the exposure of one or more slave flash units is controlled remotely by a master flash unit on the camera. The slave flash unit(s) is/are triggered by wireless remote control by the secondary reflector of the master flash unit. The light of the secondary reflector does not contribute to the exposure of the shot in this case.




The slave flash unit is assigned to one of three possible groups (A, B or C). Each of these groups may consist of one or more slave flash units. The flash modes TTL or manual M can be set for each group separately on the master flash unit.

So that multiple remote systems in the same room do not interfere with one another, there are four independent remote channels available. Master and slave flash units belonging to the same remote system must be set to the same remote channel. The slave flash units must be able to receive the light from the master flash unit with the integrated photo sensors.

 **Remote flash operation also supports second curtain synchronisation. The secondary reflector is not supported by remote flash operation. In remote flash mode the maximum flash range is not indicated on the flash unit's display panel.**

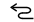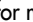21.1 Switching remote operation on and off

- Press the **Sel** key repeatedly until „Select“ appears on the display.
- Use the  and  keys to select „Remote“ from the menu. The selected menu item will be highlighted against a dark background.
- Press the **Set** key to confirm the selection of „Remote“.
- Use the  and  keys to select „Remote Master“  for master operation, „Remote Slave“  for slave operation, or „Remote OFF“ to deactivate remote operation. The setting takes effect immediately.
- Press  repeatedly to return the display to its normal reading. If the  key is not pressed, the display will switch back to normal automatically after approximately 5 seconds.

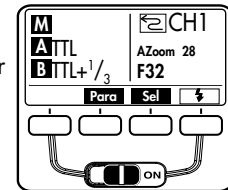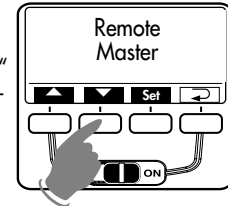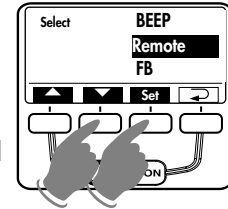


21.2 Settings on the master flash unit

- Use the **Para** key to access, in succession, the settings for the master flash unit M and the slave groups A, B, and C.
- While M, A, B or C is displayed, use the **Mode** key to set the flash mode (TTL or M). If no flash mode is displayed, the master or group is deactivated.
- ☞ **When the master is deactivated, it assumes a control function only and does not contribute to the exposure.**
- The **+** and **-** keys may be used in TTL and A flash modes to set flash exposure corrections of from -3 EV to +3 EV in one-third increments. In M mode the **+** and **-** keys are used to set partial light output levels.
- Now use the **Para** key to open the remote channel Ch and the zoom position of the reflector, then use the **+** and **-** keys to enter the necessary settings.
- Press ↵ to save your settings. If the ↵ key is not pressed, the settings will be saved automatically after approximately 5 seconds.
- ☞ **The settings for the slave group C are visible only as they are being entered, as the system does not allow them to appear on the display panel of the master flash unit after they have been saved.**

21.3 Settings on the slave flash unit

- Use the **Para** key to select, in succession, the settings for choice of slave group („Group“), the remote channel („Channel“) and the reflector position („Zoom“). Use the **+** and **-** keys to set the desired slave group or remote channel and the zoom position of the reflector.
- ☞ **The slave flash unit must be adjusted to the same remote channel as the master flash unit! The slave operating mode (TTL remote or manual remote) cannot be set on the slave flash unit, because this is controlled automatically by the master flash unit!**
- Press ↵ to save your settings. If the key ↵ is not pressed, the settings will be saved automatically after approximately 5 seconds.

21.4 Testing remote operation

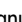
- Place the slave flash units in the desired positions for the shot.
- Wait for all of the flash units involved to become flash ready. The AF measuring beam will also blink on the slave flash units when they are flash ready. Activate audio signals (beep) if desired (see 7.2).
- Press the manual firing button  ⑩ on the master flash unit to fire a test flash. The slave flash units will respond in succession, according to slave group, with a test flash. If a slave flash unit fails to fire a test flash, check the settings for remote channel and slave group. Correct the position of the slave flash unit so that it is able to receive the light from the master flash unit.
- ☞ **If the modelling light function ML (see 7.8) is set on the master flash unit, then a modelling light will be fired from the slave flash units simultaneously with the firing of the modelling light by the master.**

21.5 Servo mode


The Servo mode is a simple slave mode in which the slave flash unit always triggers a flash as soon as it receives a light pulse.

Adjustment procedure for servo flash mode


- Select a mode for the camera flash unit without pre-flash.

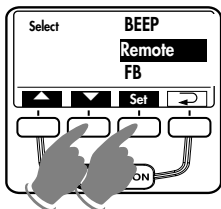

- Press the **Set** key repeatedly until "Select" appears on the display.
- Use the **▲** and **▼** keys to select the menu item "Remote". The selected menu item will be highlighted with a dark bar.

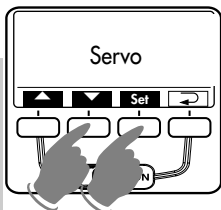


- Press the **Set** button and select "Servo" by pressing the **▲** and **▼** buttons. The setting will take effect immediately.
- Press the button **↻** repeatedly until the screen returns to the normal display. If the button **↻** is not pressed, the screen will automatically return to normal display after 5 s.

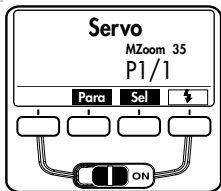

In general, only the manual flash mode **M** is possible in the SERVO flash mode. This is automatically selected after switching the SERVO flash mode on.

Setting partial lighting or reflector position (MZoom)

- In SERVO mode, press the **Para** button repeatedly until the set partial lighting or reflector position is shown. By using the **+** and **-** buttons, the partial lighting (for example 1/8) or reflector position (for example MZoom 50) can be set.

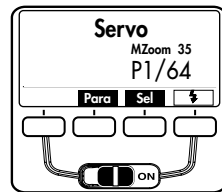



Wait for all of the flash units involved to become flash-ready.

Once the slave flash unit is flash-ready, its AF measuring beam ⑪ will start blinking.

ⓘ *Slave groups and remote channels cannot be set in SERVO mode.*

Switching Servo flash mode off


- Press **Set** repeatedly until "REMOTE" is shown in the screen
- Press the **Set** button and by using the **▲** button, select the menu item "REMOTE OFF". The selected menu item will be highlighted with a dark bar. The setting will take effect immediately.
- Press the button **↻** repeatedly until the screen returns to the normal display. If the button **↻** is not pressed, the screen will automatically return to normal display after 5 s.

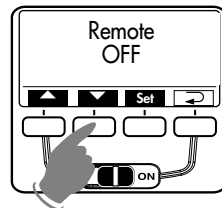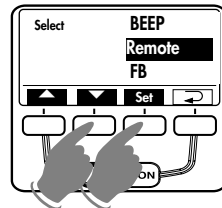

22 Care and maintenance

Remove dust and grime with a soft dry cloth or silicon-treated cloth. Do not use cleaning agents as these may damage the plastic parts.

22.1 Firmware updates

The flash unit's firmware can be updated through the USB port  and adjusted to the technical requirements of future cameras (Firmware Update).

For more information, visit the Metz homepage at www.metz.de.

22.2 Reset



The flash unit can be reset to the factory settings. To do this, press the **Mode** key and hold it down for approx. 3 seconds. „Reset“ will then appear on the display panel. After about 3 seconds the display reading will return to the factory setting.

 ***This will not affect the firmware updates for the flash unit.***

22.3 Flash capacitor forming

The flash capacitor built into the flash unit undergoes physical change if the unit is not switched on for a prolonged period. For this reason it is necessary to switch the unit on for approximately 10 minutes at least once every three months. The power supplied by the power source must be sufficient to cause the flash readiness indicator to light up no more than one minute after the flash unit is switched on.

23 Troubleshooting

 ***Should the flash unit fail to function properly or meaningless content appear on the flash unit display panel, switch the flash unit off with the main switch  for approximately 10 seconds. Check the camera settings and make sure the foot of the flash unit is mounted correctly in the camera's accessory shoe.***

Replace the batteries with new or freshly charged batteries.

The flash unit should function normally again once it is switched back on. If this is not the case, contact your local dealer.

Below is a list of some of the problems that may occur when the flash unit is used. For each item, possible causes and remedies for the problem are listed.

No maximum flash range indication appears on the display panel.

- The main reflector is not in normal position.
- The flash unit has been set to remote operation.

"TILT" appears on the display

- The main reflector is tilted downwards for close-up or macro shots.

"POWERPACK" appears on the display

- An unauthorised power pack has been connected to the mecablitz. Use only a Metz Power Pack P76.
- A Metz Power Pack P76 is connected and there are still batteries in the battery compartment of the mecablitz. Remove the batteries from the mecablitz.

A battery warning appears on the display

- When the battery warning appears on the display there is still enough power left for a few more flashes. See also chapter 3.2 "Replacing batteries". There are, however, battery batches with which the battery warning appears relatively early, even though there may still be up to 50 % of the flashes still available. In wireless remote mode it is not possible to provide a battery warning for system-related reasons.

A battery symbol appears on the display

- There is a Metz Power Pack P76 connected to the mecablitz and there are batteries in the battery compartment of the mecablitz. Remove batteries from the mecablitz.

The AF measuring beam of the flash unit is not activated.

- The flash unit is not ready for firing.
- The camera is not in Single AF mode (S-AF).
- The camera supports only its own internal AF measuring beam.
- Some cameras support the AF measuring beam in the flash unit only with the camera's central AF sensor. If a peripheral AF sensor is selected, then the AF measuring beam will not be activated in the flash unit. Activate the central AF sensor.

The reflector position is not automatically adjusted to the current zoom position of the lens.

- The camera is not transmitting any digital data to the flash unit (Group A cameras).
- There is no exchange of data between the flash unit and the camera. Tap the camera's shutter release.
- The camera is equipped with a lens without CPU.
- The main reflector is swivelled out of its locked normal position.
- The wide-angle diffuser folds out from the main reflector.
- A Mecabounce is mounted in front of the main reflector.

The aperture setting on the flash unit is not automatically adjusted to that of the lens.

- The camera is not transmitting any digital data to the flash unit (Group A cameras).
- There is no exchange of data between the flash unit and the camera. Tap the camera's shutter release.
- The camera is equipped with a lens without CPU.

The secondary reflector cannot be activated, or no flash is triggered.

- The secondary reflector does not support the stroboscopic, remote and modeling light (ML) flash modes. In these modes the secondary reflector cannot be activated, or the secondary reflector does not trigger a flash.
- The main reflector is in its normal position or tilted downwards.

The secondary reflector flashes even though it is switched off.

- The mecablitz operates as a master in the remote system. The secondary reflector of the master flash unit controls the slave flash units. The light of the secondary reflector does not contribute to the exposure of the shot in this case.

The TTL fill-in flash BL cannot be set.

- There has been no exchange of data between the flash unit and the camera. Tap the camera's shutter release.
- The camera does not support TTL fill-in flash mode.
- The camera is switched to spot metering. Choose another metering type, for example multi-zone metering.

The setting for manual TTL flash exposure correction has no effect.

- The camera does not support manual TTL flash exposure correction on the flash unit (Group A cameras, for example).

Flash unit cannot be set for wireless remote operation as the master flash unit.

- Wireless remote operation is supported only by Group E cameras. Remote flash operation is not available with other cameras.
- There has been no exchange of data between the flash unit and the camera. Tap the camera's shutter release.

Automatic switching to the flash sync speed fails to occur.

- The camera has a between-the-lens shutter (as do most compact cameras), Switching to sync speed is therefore unnecessary.
- The camera operates with FP high-speed synchronisation (camera setting). In this case no switching to sync speed occurs.
- The camera operates with shutter speeds that are slower than the flash sync speed. Depending on the camera mode, there is no switch to flash sync speed (see the camera's operating instructions).

The shots have shadows in the bottom of the image.

- Because of parallax error between lens and flash unit, close-up shots may not, depending on the focal length at the bottom of the image, be fully illuminated. Tilt the main reflector downwards or turn the wide-angle diffuser in front of the reflector.

The shots are too dark.

- The subject is beyond the range of the flash unit. Note: Using bounce flash reduces the range of the flash unit.
- The subject contains very bright or highly reflective areas. The metering system of the camera or flash unit is deceived as a result. Set a positive manual flash exposure correction, e.g., +1 EV.

The shots are too bright.

- For close-ups it is necessary to ensure that certain minimum lighting distances are maintained to avoid overexposure. The minimum distance from the subject should be at least 10% of the maximum flash range indicated on the display.

The flash parameters for ISO film speed and the aperture (f-stop) cannot be adjusted on the flash unit.

- There is an exchange of digital data between flash unit and camera through which the ISO and aperture (f) values are automatically adjusted on the flash unit. ISO and aperture are adjustable only when no digital data exchange is taking place, as for example with Group A cameras.

ISO	Zoom							
	12	24	28	35	50	70	85	105
6/9°	5	7	8	9	11	12	13	15
8/10°	5,6	8	9	10	12	13	15	16
10/11°	6,3	9	10	11	13	14	16	18
12/12°	7	10	11	12	15	16	18	21
16/13°	7,9	12	12	14	17	18	21	23
20/14°	8,9	13	14	16	19	20	23	26
25/15°	10	15	16	18	21	23	26	29
32/16°	11	16	17	20	24	26	29	33
40/17°	12	18	20	22	26	29	33	37
50/18°	14	21	22	25	30	33	37	41
64/19°	15	23	25	28	33	37	41	46
80/20°	17	26	28	31	37	41	46	52
100/21°	20	29	31	35	42	46	52	58
125/22°	22	33	35	39	47	52	58	65
160/23°	25	37	39	44	53	58	66	73
200/24°	28	41	44	49	59	65	74	82
250/25°	31	46	49	56	67	73	83	92
320/26°	35	52	55	62	75	82	93	103
400/27°	40	58	62	70	84	92	104	116
500/28°	44	65	70	79	94	103	117	130
650/29°	50	73	78	88	106	116	131	146
800/30°	56	82	88	99	119	130	147	164
1000/31°	63	92	98	111	133	146	165	184
1250/32°	71	103	110	125	150	164	185	207
1600/33°	80	116	124	140	168	184	208	232
2000/34°	89	130	139	157	189	207	233	260
2500/35°	100	146	156	176	212	232	262	292
3200/36°	113	164	175	198	238	260	294	328
4000/37°	127	184	197	222	267	292	330	368
5000/38°	142	207	221	249	299	328	371	413
6400/39°	160	232	248	280	336	368	416	464

Tabelle 3: Leitzahlen bei maximaler Lichtleistung (P 1/1)

Tableau 3: Nombres-guides pour la puissance maximale (P 1/1)

Tabel 3: Richtgetallen bij vol vermogen (P 1/1)

Table 3: Guide numbers at maximum light output (P 1/1)

Tabella 3: Numeri guida a potenza piena (P 1/1)

Tabla 3: Números-guía con máxima potencia de luz (P 1/1)

Teillichtleistung Niveaux de puissance Deelvermogensstappen Partial light output Livello di potenza Potencia parcial (P=Flash Power)	Blitzleuchtzeit (s) Durée d'éclair (s) Flitsdur (s) Flash duration Durata del lampo Duración de destello	Leitzahl Nombre-guide Richtgetal Guide number Numero guida Número-guía ISO 100/50 mm	Leitzahl Nombre-guide Richtgetal Guide number Numero guida Número-guía ISO 100/105 mm
P 1/1	1/125	42	58
P 1/1 -1/3			
P 1/1 -2/3			
P 1/2	1/650	30	41
P 1/2 -1/3			
P 1/2 -2/3			
P 1/4	1/1500	21	29
P 1/4 -1/3			
P 1/4 -2/3			
P 1/8	1/3200	15	20,5
P 1/8 -1/3			
P 1/8 -2/3			
P 1/16	1/5500	10,5	14,5
P 1/16 -1/3			
P 1/16 -2/3			
P 1/32	1/9000	7,5	10
P 1/32 -1/3			
P 1/32 -2/3			
P 1/64	1/14000	5	7
P 1/64 -1/3			
P 1/64 -2/3			
P 1/128	1/22000	3,5	5
P 1/128 -1/3			
P 1/128 -2/3			
P 1/256	1/33000	2,5	3,5

Tabelle 4: Blitzleuchtzeiten in den Teillichtleistungsstufen
Tableau 4: Durée de l'éclair pour les différents niveaux de puissance

Tabel 4: Flitsduur en deelvermogensstappen

Table 4: Flash durations at the individual partial light output levels

Tabella 4: Durata del lampo ai vari livelli di potenza flash

Tabla 4: Duraciones de destellos en los escalones de potencias parciales de luz

Blitzfrequenz f(Hz) (Blitze/Sek.) Fréquence f(Hz) (éclairs/seconde) Flitsfrequentie f(Hz) (Flitsen/sec.) Flash frequency f(Hz) (Flashes/sec.) Freq. di emissione f(Hz) (lampi al sec.) Frecuencia f(Hz) (destellos/seg.)	Blitzanzahl Nombre d'éclairs Aantal flitsen Number of flashes Numero lampi Números de destellos														
	2	3	4	5	6	7	8	9	10	15	20	25	30	40	50
1	2	4	4	8	8	8	8	15	15	15	30	30	30	60	60
2	1	2	2	4	4	4	4	8	8	8	15	15	15	30	30
3	1	1	2	2	2	4	4	4	4	8	8	15	15	15	30
4	1/2	1	1	2	2	2	2	4	4	4	8	8	8	15	15
5	1/2	1	1	1	2	2	2	2	2	4	4	8	8	15	15
6	1/2	1/2	1	1	1	2	2	2	2	4	4	8	8	8	15
7	1/2	1/2	1	1	1	1	2	2	2	4	4	4	8	8	8
8	1/4	1/2	1/2	1	1	1	1	2	2	2	4	4	4	8	8
9	1/4	1/2	1/2	1	1	1	1	1	2	2	4	4	4	8	8
10	1/4	1/2	1/2	1/2	1	1	1	1	1	2	2	4	4	4	8
15	1/4	1/4	1/2	1/2	1/2	1/2	1	1	1	1	2	2	2	4	4
20	1/8	1/4	1/4	1/4	1/2	1/2	1/2	1/2	1/2	1	1	2	2	2	4
25	1/8	1/8	1/4	1/4	1/4	1/2	1/2	1/2	1/2	1	1	1	2	2	2
30	1/15	1/8	1/4	1/4	1/4	1/4	1/2	1/2	1/2	1/2	1	1	1	2	2
35	1/15	1/8	1/8	1/4	1/4	1/4	1/4	1/2	1/2	1/2	1	1	1	2	2
40	1/15	1/8	1/8	1/8	1/4	1/4	1/4	1/4	1/4	1/2	1/2	1	1	1	2
45	1/15	1/15	1/8	1/8	1/4	1/4	1/4	1/4	1/4	1/2	1/2	1	1	1	2
50	1/15	1/15	1/8	1/8	1/8	1/4	1/4	1/4	1/4	1/2	1/2	1	1	1	1

Tabelle 5: Kameraverschlusszeiten im Stroboskop-Betrieb
 Tableau 5: Vitesses d'obturation du reflex en mode stroboscope
 Tabel 5: Belichtingstijden bij de stroboscoopfunctie
 Table 5: Camera shutter speeds in stroboscopic mode
 Tabella 5: Tempi di posa per il modo stroboscopico
 Tabla 5: Velocidades de obturación en el funcionamiento estroboscópico

Kameraverschlusszeit in Sekunden
 Vitesses d'opturation du reflex en s
 Belichtingstijden in seconden
 Camera shutter speed in seconds
 Tempo di posa in secondi
 Velocidad de obturación en segundos

Batterietyp Type de pile/accu Type voeding Battery type Tipo batterie Tipo de pila	Blitzfolgezeiten Temps de recyclage Flitsvolgtijden Recycling times Tempi di ricarica Tiempo de secuencia de dest.		Blitzanzahl Nombre d'éclairs Aantal flitsen Number of flashes Numero ampi Número de destellos min. /max.
	M	A / TTL	
High Power Alkali-Mangan Alcaline au Mg hautes perf. High Power alkalimangaan High-power alkaline-manganese Alcal. al mangan. ad alta capacità Alcalino-Manganesas High power	5 s	0,1 ... 5 s	180 ... 3000
NiMh-Akku 1600 mAh	5 s	0,1 ... 5 s	180 ... 2000

Tabelle 6: Blitzfolgezeiten und Blitzanzahl bei den versch. Batterietype
Tableau 6: Temps de recyclage et autonomie pour différents types de piles
Tabel 6: Flitsvolgtijden en aantallen flitsen bij de verschillende voedingstypes
Table 6: Recycling times and number of flashes with different battery types
Tabella 6: Tempi di ricarica e numero lampi con i diversi tipi di batterie
Tabla 6: Tiempos de secuencias de dest. y núm. de dest. con los dist. tipos de pilas

	Zoom							
	18	24	28	35	50	70	85	105
HSS	11	13	14	15	19	20	23	26

Tabelle 7: Maximale Leitzahlen im HSS-Betrieb
Tableau 7: Nombres-guides en mode HSS
Tabel 7: Max. Richtgetallen bij de HSS functie
Table 7: Maximum guide numbers at HSS-Mode
Tabella 7: Potenza piena a numeri guida per il modo HSS
Tabla 7: Números-guía max. en el funcionamiento HSS



Ihr Metz-Produkt wurde mit hochwertigen Materialien und Komponenten entworfen und hergestellt, die recycelbar sind und wieder verwendet werden können.

(D)

Dieses Symbol bedeutet, dass elektrische und elektronische Geräte am Ende ihrer Nutzungsdauer vom Hausmüll getrennt entsorgt werden müssen.

Bitte entsorgen Sie dieses Gerät bei Ihrer örtlichen kommunalen Sammelstelle oder im Recycling Centre.

Bitte helfen Sie mit die Umwelt, in der wir leben, zu erhalten.



Votre produit Metz a été conçu et fabriqué avec des matériaux et composants de haute qualité, susceptibles d'être recyclés et réutilisés.

(F)

Ce symbole signifie que les appareils électriques et électroniques, lorsqu'ils sont arrivés en fin de vie, doivent être éliminés séparément des ordures ménagères.

Veuillez rapporter cet appareil à la déchetterie communale ou à un centre de recyclage.

Vous contribuez ainsi à la préservation de l'environnement.



Uw Metz-product is ontworpen voor en gebouwd uit hoogwaardige materialen en componenten die gerecycled kunnen worden en dus geschikt zijn voor hergebruik.

(NL)

Dit symbool betekent, dat elektrische en elektronische apparatuur aan het einde van zijn levensduur gescheiden van het huisvuil apart moet worden ingeleverd.

Breng dit apparaat naar een van de plaatselijke verzamelpunten of naar een kringloopwinkel.

Help s.v.p. mee, het milieu waarin we leven te beschermen.



Your Metz product was developed and manufactured with high-quality materials and components which can be recycled and/or re-used.

(GB)

This symbol indicates that electrical and electronic equipment must be disposed of separately from normal garbage at the end of its operational lifetime.

Please dispose of this product by bringing it to your local collection point or recycling centre for such equipment.

This will help to protect the environment in which we all live.



Il vostro prodotto Metz è stato progettato e realizzato con materiali e componenti pregiati che possono essere riciclati e riutilizzati.

(I)

Questo simbolo significa che gli apparecchi elettrici ed elettronici devono essere smaltiti separatamente dai rifiuti domestici alla fine del loro utilizzo.

Vi preghiamo di smaltire questo apparecchio negli appositi punti di raccolta locali o nei centri preposti al riciclaggio.

Contribuite anche voi a tutelare l'ambiente nel quale viviamo.



Su producto Metz ha sido concebido y fabricado con materiales y componentes de alta calidad, que pueden ser reciclados y reutilizados.

(E)

Este símbolo significa que los aparatos eléctricos y electrónicos, al final de su vida útil, deberán ser separados de los residuos domésticos y reciclados.

Rogamos llevar este aparato al punto de recogida de su municipio o a un centro de reciclaje.

Por favor, contribuya Vd. también en la conservación del ambiente en que vivimos.

CE Hinweis: (D)

Im Rahmen des CE-Zeichens wurde bei der EMV-Prüfung die korrekte Belichtung ausgewertet.

⚠ SCA-Kontakte nicht berühren !

In Ausnahmefällen kann eine Berührung zur Beschädigung des Gerätes führen.

CE Opmerking: (NL)

In het kader de CE-markering werd bij de EMV-test de correcte belichting bepaald.

⚠ SCA Contacten niet aanraken !

In uitzonderlijke gevallen kan aanraken leiden.

CE Avvertenza: (I)

Nell'ambito delle prove EMV per il segno CE è stata valutata la corretta esposizione.

⚠ Non toccate mai i contatti SCA !

In casi eccezionali il toccare può causare danni all'apparecchio.

CE Remarque: (F)

L'exposition correcte a été évaluée lors des essais de CEM dans le cadre de la certification CE.

⚠ Ne pas toucher les contacts du SCA !

Il peut arriver que le contact avec les doigts provoque la dégradation de l'appareil.

CE Note: (GB)

Within the framework of the CE approval symbol, correct exposure was evaluated in the course of the electromagnetic compatibility test.

⚠ Do not touch the SCA contacts !

In exceptional cases the unit can be damaged if these contacts are touched.





CE Atención: (E)


El símbolo CE significa una valoración da exposición correcta con la prueba EMV (prueba de tolerancia electromagnética).

⚠ No tocar los contactos SCA !



En algunos casos un contacto puede producir daños en el aparato.

Technische Änderungen und Irrtümer vorbehalten !
Sous réserve de modifications et d'erreurs !
Onder voorbehoud van wijzigingen en vergissingen !
Errors excepted. Subject to changes !
Riserva di modifiche e disponibilità di fornitura.
Con reserva de modificaciones y posibilidades de entrega.

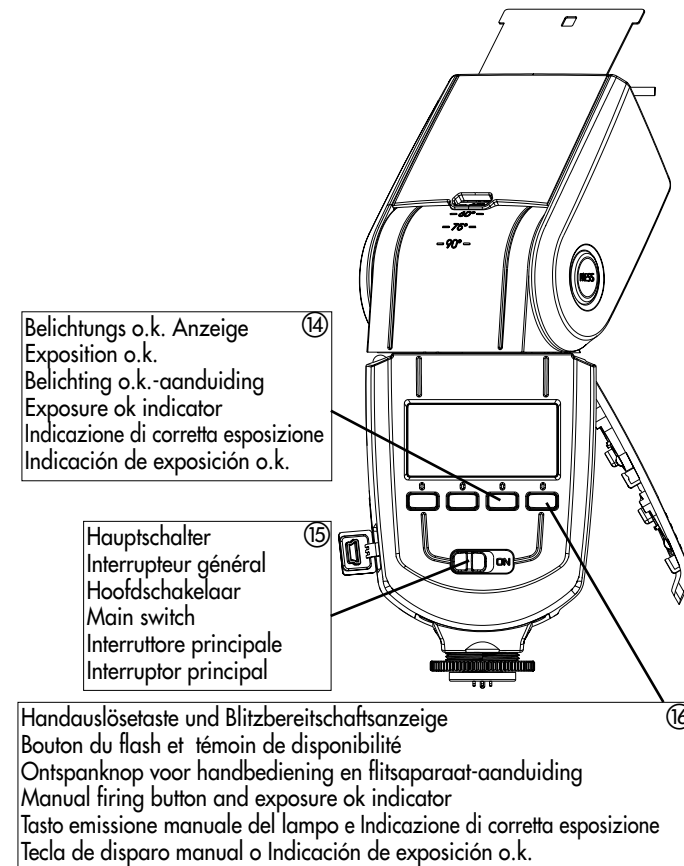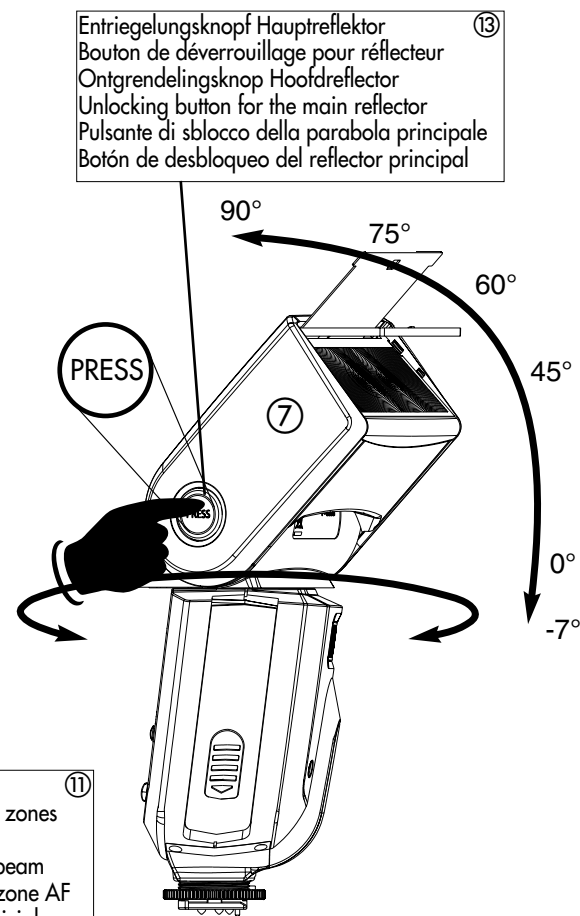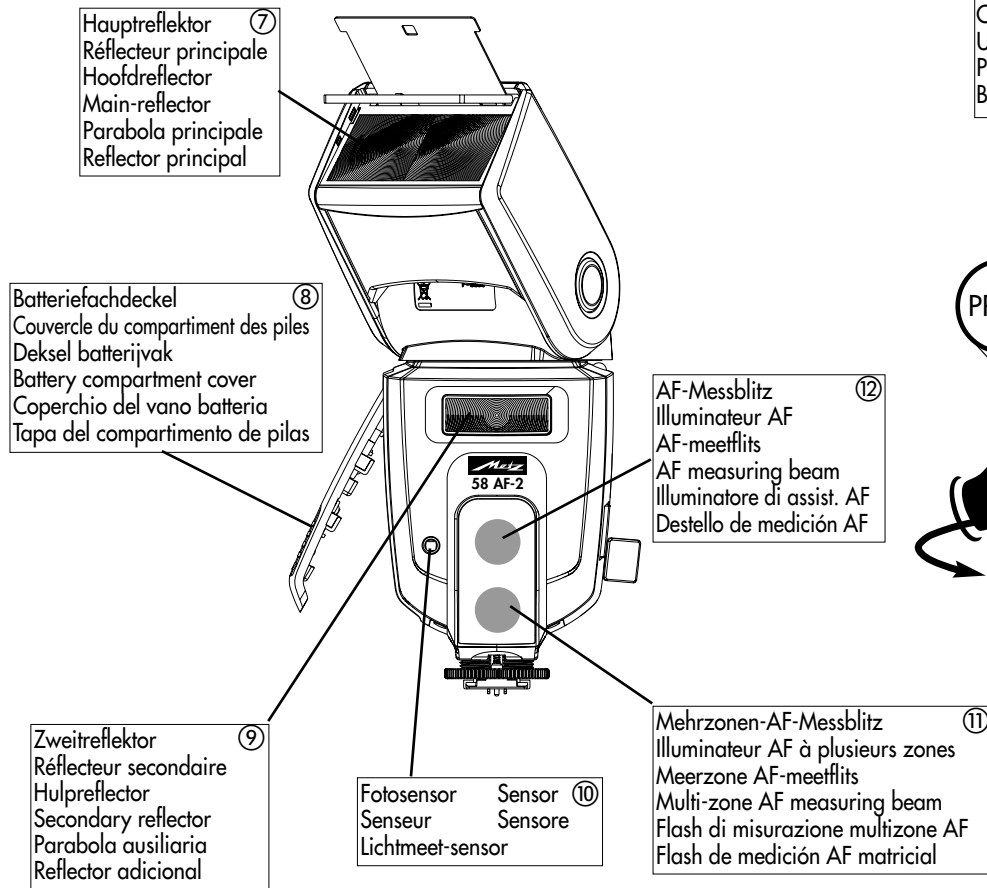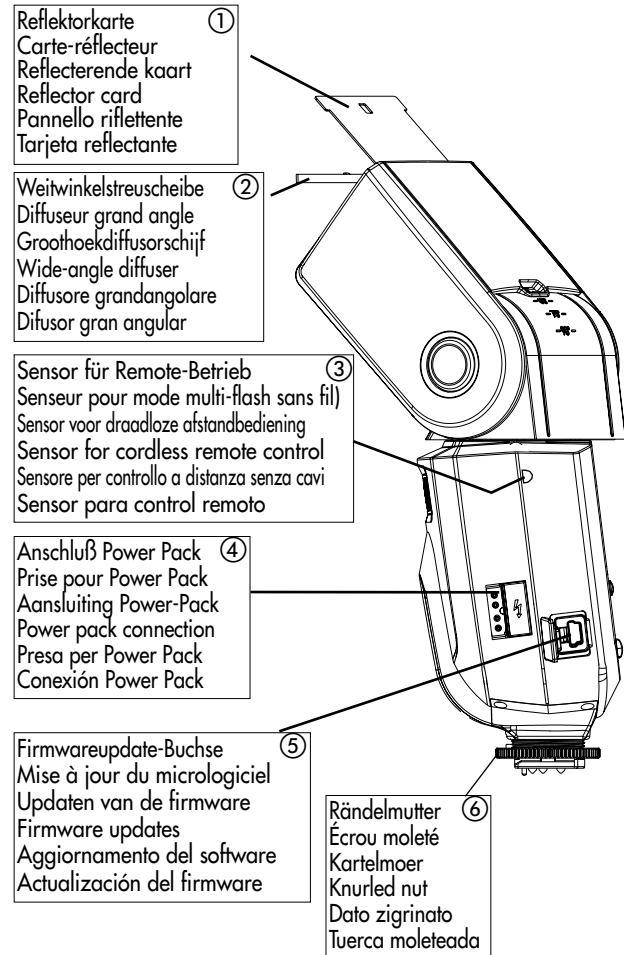

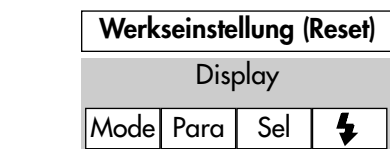

5 sec.

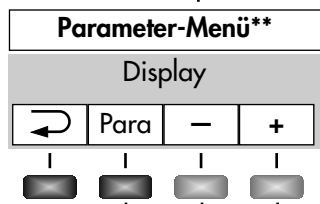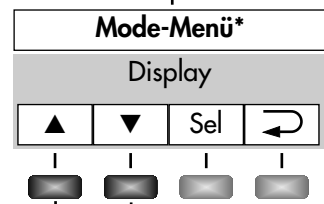


TTL
E-TTL*/ P-TTL*
TTL-BL
E-TTL-HSS*/ P-TTL-HSS*
A
M
M-HSS*
⚡⚡⚡


*abhängig vom Kamerateyp
 Suivant le type d'appareil
 Afhankelijk van het type camera
 Depending on the camera model
 Con alcuni tipi di fotocamera
 Según el tipo de cámara


F	1,0 ... 45
M-Zoom	24....105 mm
EV	-3 ... +3
P	1/1 – 1/256
ISO	6 ... 6400
N	2 ... 50
f	1 ... 50 Hz

**abhängig vom Kamerateyp und Blitzbetriebsart
 Suivant le type d'appareil et mode flash
 Afhankelijk van het type camera en flitsfunctie
 Depending on the camera mode and flash mode
 Con alcuni tipi di fotocamera e modo flash
 Según el tipo de cámara y modo de flash

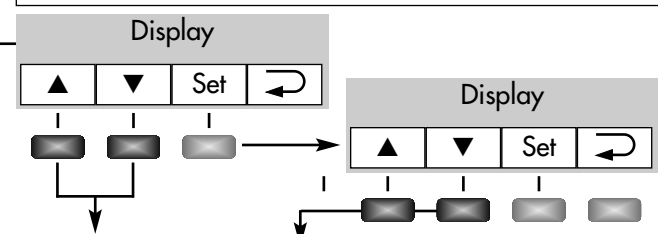

🌿	ON/OFF
REAR	ON/OFF
Beep	ON/OFF
Remote	Remote OFF/Master/Slave
FB	1/3 – 3 EV
Standby	OFF/1min/10min
ML	ON/OFF
KEYLOCK	NO/YES
ZoomExt	Ext ON/Ext OFF
ZoomSize	ON/OFF
m / ft	m / ft
AF-BEAM	ON/OFF

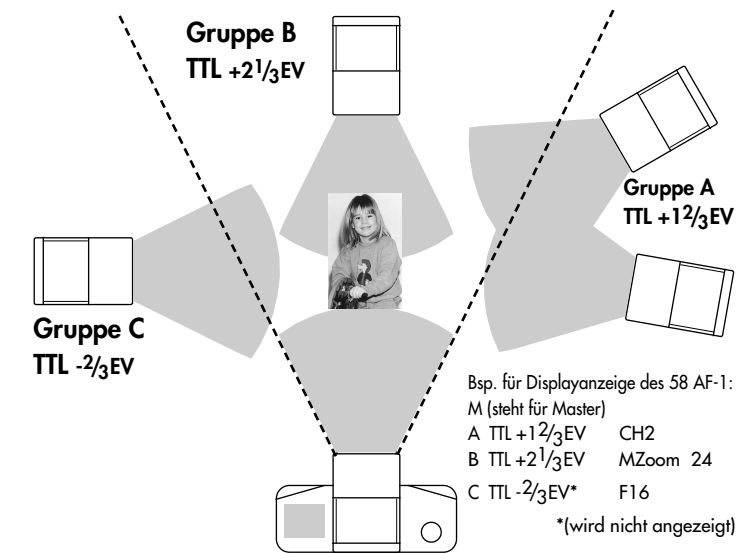

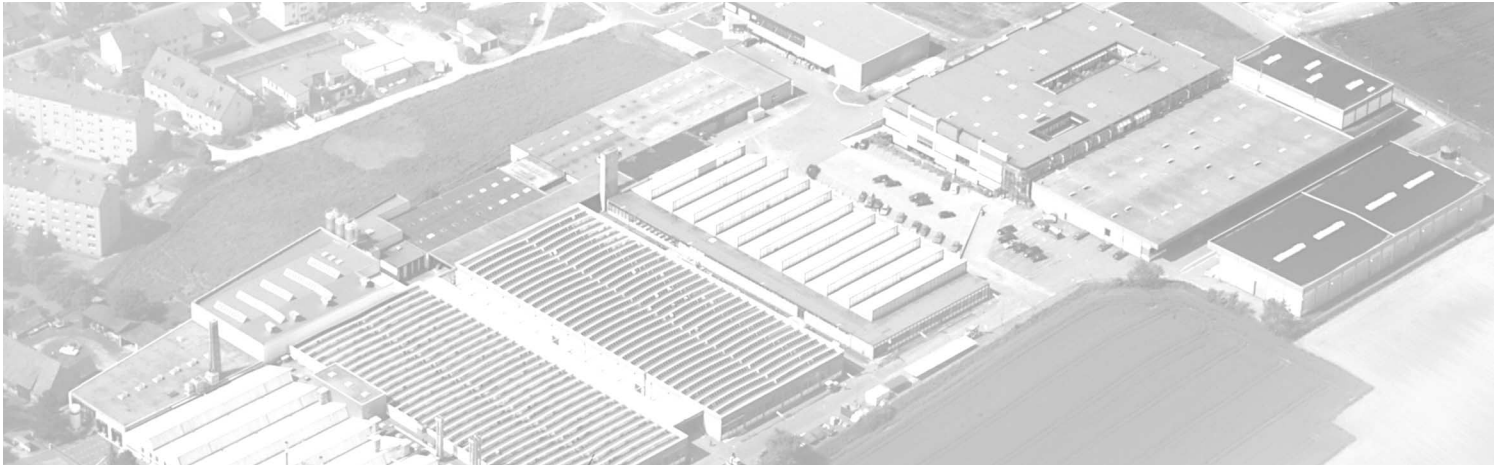

This document was archived December 2013 for photomacrography documentation purposes at the <http://extreme-macro.co.uk> extreme macro website. All rights reserved by the document authors



709 47 0159.A1

